

BEST-IN-CLASS EXTENDED SUPPORT & MAINTENANCE FOR YOUR END-OF-LIFE NEC PHONE SYSTEM

We've built a holistic suite of services designed to support and extend the life of your NEC premise-based phone system. Whether your system is nearing end-of-life or already unsupported by NEC, LegacyCare ensures that your communication infrastructure remains reliable, efficient, and cost-effective.

Service Available for: NEC's SV9100, SV9300, SV9500, SL2100, SV8100, SV8300, SV8500, IPKII and IPK.



PHONE SYSTEM SERVICES INCLUDED

LEGACYCARE MAINTENANCE

Our on-site 14-point inspection and extended maintenance service can ensure continued system reliability and uptime.

LEGACYCARE SUPPORT

Our 24/7 US-based support team is here to get you operational and keep you there without any pressure to migrate off of your existing PBX.

LEGACYCARE PARTS

Legacy systems parts will eventually become scarce, so we work with our suppliers to source the parts you need to keep your system reliable.

LEGACYCARE GUIDANCE

When you're ready, our team of Solutions Consultants will discuss migration options to a new platform, best matched for your specific needs.

With LegacyCare for NEC you can count on:

- No Required Software Support (SWA Software Assurance is not required)
- 24/7 U.S. Based Support
- NEC-Certified Phone Technicians
- Legacy Parts Sourcing
- Remote & Onsite Support Options
- Available Nationwide
- Continued Support After NEC Exits Phone System Market
- No Pressure to Upgrade

Whether you're looking to maximize your existing investment today or prepare for a seamless transition to modern technology tomorrow, LegacyCare and our Guidance provides clear, unbiased insights and actionable strategies. Trust us to deliver the expertise and support you need to navigate these critical decisions with confidence.

LegacyCare for NEC is powered by Clarktel Telecommunications, Inc., a Double Diamond NEC Partner for the past 40 years; operating independent of NEC with our team of NEC-Certified Engineers who are available 24/7 to serve you long after NEC shuts its U.S. operations.

Learn more here: <https://www.clarktel.net/legacycare-nec-phone-maintenance-nationwide>

SL2100

DT920 (ITK-8LCX) User Guide

NEC Enterprise Communication Technologies, Inc. reserves the right to change the specifications, functions, or features at any time without notice.

NEC Enterprise Communication Technologies, Inc. has prepared this document for use by its employees and customers. The information contained herein is the property of **NEC Enterprise Communication Technologies, Inc.** and shall not be reproduced without prior written approval of **NEC Enterprise Communication Technologies, Inc.**

Windows and Internet Explorer are registered trademarks of Microsoft Corporation.

Copyright 2020

NEC Enterprise Communication Technologies, Inc.
3929 W. John Carpenter Freeway
Irving, TX 75063-9406

TABLE OF CONTENTS

Chapter 1 DT920 (ITX-8LCX)

Section 1	Introduction	1
Section 2	Installation	2
2.1	Installing the Handset and LAN Cable	2
2.2	Adjusting the Angle of the Tilt Legs	3
2.2.1	Adjust Angle of Tilt Legs	3
2.2.2	Raise the Height of the Tilt Legs:	3
Section 3	Using Your Terminal	4
3.1	Keys and Parts	4
3.2	Technical Specifications	6
3.3	Screen Layout and Key Functions	7
3.3.1	Function Key Information	8
3.3.2	LCD	8
3.3.3	Menu Key	9
3.4	For Your Convenience	12
3.4.1	Programmable Function Keys	12
3.4.2	DSS/One-Touch Keys	13
3.4.3	Abbreviated Dial (Speed Dial) Registration	14
3.4.4	Entering Alphanumeric Characters	15
Section 4	Calling Features	16
4.1	Placing Calls	16
4.1.1	Place an Outside Call (Quick Access)	16
4.1.2	Place an Outside Call (Access by Code)	16
4.1.3	Place an Intercom Call (Dial Access)	17

4.2	Placing Calls Quickly.....	17
4.2.1	Directory Dialing	17
4.2.2	Last Number Dialing	18
4.2.3	Callback by Received Number	18
4.2.4	Abbreviated (Speed) Dialing <for Outside>	19
4.2.5	One-Touch / DSS Call	19
4.3	If Your Call Doesn't Go Through.....	20
4.3.1	Set Camp On / Callback	20
4.3.2	Cancel Camp On / Callback	20
4.3.3	Repeat Dialing (Outside Call Only)	21
4.3.4	Answer Message Waiting (Terminal Indicator is Flashing Red) ..	21
4.3.5	Cancel Message Waiting	22
4.4	Answering Calls	22
4.4.1	Answering an Outside Call	22
4.4.2	Answering an Intercom Call	22
4.4.3	Picking up a Call for Other Extensions	23
4.5	Hold / Transferring Calls	23
4.5.1	Holding a Call / Retrieving a Held Call	23
4.5.2	Holding a Call Exclusively	24
4.5.3	Retrieve a Held Outside Call	24
4.5.4	Transferring a Call to the Other Extension	25
4.6	For More Convenient Use... ..	25
4.6.1	Do Not Disturb (DND)	25
4.6.2	Conference	26
4.6.3	Call Forwarding / Follow Me	26
Section 5	Soft Keys Operation – Default Advanced Mode 2.....	29
5.1	Menu Soft Key	29
5.2	Dir Soft Key	30
5.3	VM Soft Key	30
5.4	CL Soft Key	31
5.5	Soft Key Operations During Off-Hook Condition	32

- 5.6 Soft Key Operations During Intercom Calling 32
- 5.7 Soft Key Operations After Establishing an Intercom Call 33
- 5.8 Soft Key Operations During Outside Call 34
- Section 6 Cursor Key Operation..... 35**
- 6.1 Menu Structure When PRG 15-02-60 is Set to Standard Mode 35
- 6.2 Menu Structure When PRG 15-02-60 is set to Advanced Mode 1 .. 36
- Section 7 Soft Keys Operation – Standard Mode..... 38**
- 7.1 Soft Key Structure When PRG 15-02-60 is set to Standard Mode .. 38
- Section 8 In-Mail (Voice Mail)..... 42**
- 8.1 Log-On to the In-Mail 42
- 8.2 Call Forward to Voice Mail 43
- 8.3 Mailbox Greeting 45
- 8.4 Mailbox Security Code 45
- 8.5 Listen to Messages Left in Your Mailbox 46
- Section 9 In-Mail (Voice Mail System Administrator) 47**
- Log-In to In-Mail 47



LIST OF FIGURES AND TABLES

Figure 1	DT920 (ITK-8LCX-1) Self-Labeling Model	1
Figure 2	Installing the Handset and LAN Cable	2
Figure 3	Adjust the Tilt Leg Angle	3
Figure 4	Adjust the Tilt Leg Height	3
Figure 5	DT920 (ITK-8LCX)	4
Figure 6	ITK-8LCX Display	7
Figure 7	Example of Idle Display	8
Figure 8	DT920 – Programmable Function Keys	12
Figure 9	DSS/One-Touch Keys	13
Figure 10	Abbreviated Dial (Speed Dial) Registration Keys	14
Figure 11	Alphanumeric Characters	15
Figure 12	Placing an Outside Call Using Quick Access	16
Figure 13	Placing an Outside Call Using an Access Code	16
Figure 14	Placing an Intercom Call Using Dial Access	17
Figure 15	Directory Dialing	17
Figure 16	Last Number Dialing	18
Figure 17	Callback Using Received Number	18
Figure 18	Abbreviated Speed Dialing for Outside Call	19
Figure 19	One-Touch / DSS Call	19
Figure 20	Set Camp On or Callback	20
Figure 21	Cancel Camp On or Callback	20
Figure 22	Repeat Dialing for Outside Call	21
Figure 23	Answer Message Waiting When Indicator Flashes Red	21
Figure 24	Cancel Message Waiting	22
Figure 25	Answering an Outside Call	22
Figure 26	Answering an Intercom Call	22
Figure 27	Pick Up Call for Other Extensions	23
Figure 28	Holding a Call or Retrieve a Held Call	23
Figure 29	Holding a Call Exclusively	24
Figure 30	Retrieve a Held Outside Call	24

Figure 31	Transfer Call to Other Extension	25
Figure 32	Do Not Disturb	25
Figure 33	Holding a Call Exclusively	26
Figure 34	Call Forward Immediate	26
Figure 35	Call Forward When Busy	27
Figure 36	Call Forward No Answer	27
Figure 37	Call Forward Busy / No Answer	27
Figure 38	Call Forward Both Ring	28
Figure 39	Call Forward Follow Me	28
Figure 40	Menu Soft Key	29
Figure 41	Holding a Call Exclusively	30
Figure 42	VM Soft Key	30
Figure 43	CL Soft Key	31
Figure 44	Operations During Off-Hook Conditions	32
Figure 45	Operations During Intercom Calling	32
Figure 46	Operations After Intercom Call Established	33
Figure 47	Operations During Outside Call	34
Figure 48	Program 15-02-60 Set to Standard Mode	35
Figure 49	Program 15-02-60 Set to Advanced Mode 1	36
Figure 50	Program 15-02-60 Set to Advanced Mode 1 (Cont.)	37
Figure 51	Program 15-02-60 Set to Standard Mode	38
Figure 52	Program 15-02-60 Set to Standard Mode (Cont.)	39
Figure 53	Program 15-02-60 Set to Standard Mode (Cont.)	40
Figure 54	Program 15-02-60 Set to Standard Mode (Cont.)	41
Figure 55	Log-On to In-Mail	42
Figure 56	Operation by Function Key	43
Figure 57	Forward All Incoming Calls	43
Figure 58	Forward Incoming Call When Busy	43
Figure 59	Forward Incoming Call When No Answer	44
Figure 60	Forward Incoming Call When Busy / No Answer	44
Figure 61	Mailbox Greeting	45
Figure 62	Mailbox Security Code	45
Figure 63	Operation by Function Key	46
Figure 64	Operation by Soft Key	46

Figure 65 Basic Operation Without Function Key 46
Figure 66 Basic Operation Without Function Key 47



DT920 (ITX-8LCX)

SECTION 1 INTRODUCTION

Thank you for purchasing NEC SL2100 system.

Due to the flexibility built into the system, your Dialing Codes and Feature Capacities may differ from those in this guide. Check with your NEC Authorized Supplier / System Administrator and make note of any differences.

Figure 1 DT920 (ITK-8LCX-1) Self-Labeling Model



SECTION 2 INSTALLATION


2.1 Installing the Handset and LAN Cable

When installing the handset:

1. Make sure the handset cord is plugged into the handset jack on the telephone base.
2. The LAN cable routes through the channel on the telephone base or the telephone legs. (The LAN cable is customer provided.)

*Power Feed: PoE (IEEE802.3af) Only

Figure 2 Installing the Handset and LAN Cable

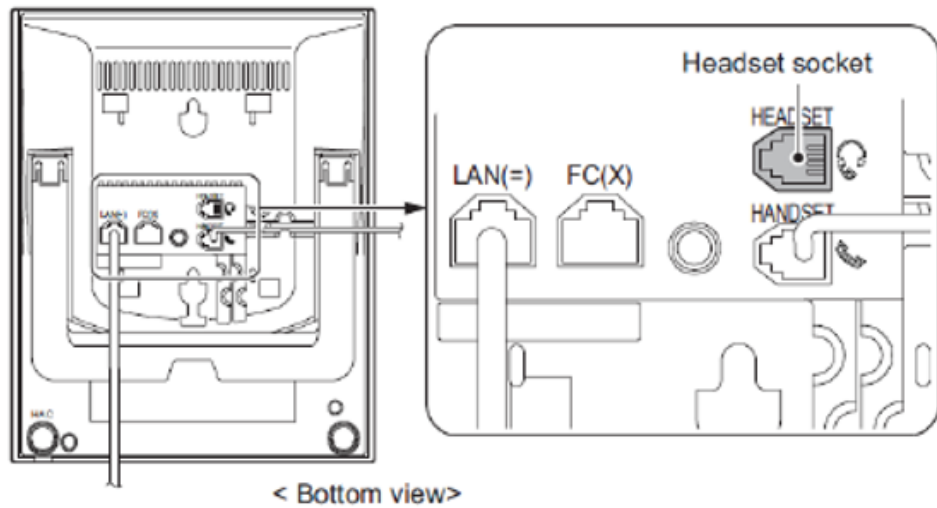


2.2 Adjusting the Angle of the Tilt Legs

2.2.1 Adjust Angle of Tilt Legs

1. Turn the terminal over (key side down).
2. Adjust the legs to the desired height (upward to raise the height / downward to lower the height).

Figure 3 Adjust the Tilt Leg Angle

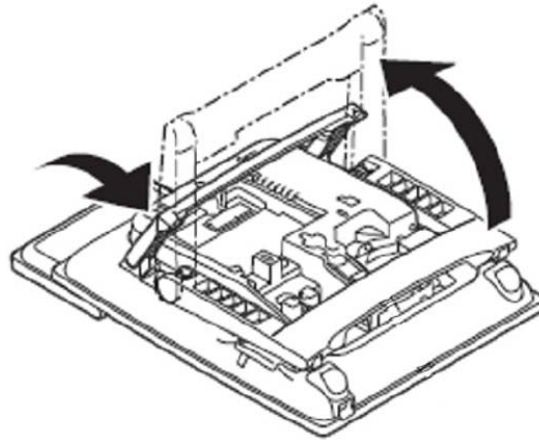


3. Turn the terminal over (key side up).

2.2.2 Raise the Height of the Tilt Legs:

The height can be adjusted by moving the legs, which are attached to the bottom of the terminal.

Figure 4 Adjust the Tilt Leg Height

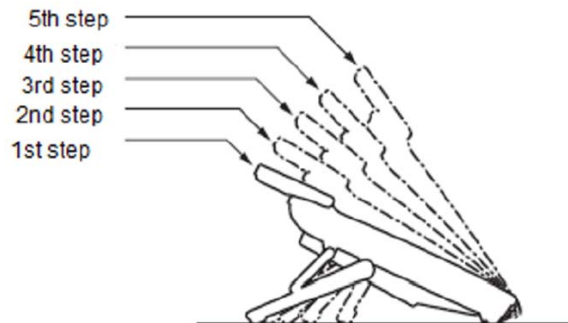


SECTION 3 USING YOUR TERMINAL

This manual provides a function key layout for the DT920 terminal.

3.1 Keys and Parts

Figure 5 DT920 (ITK-8LCX)

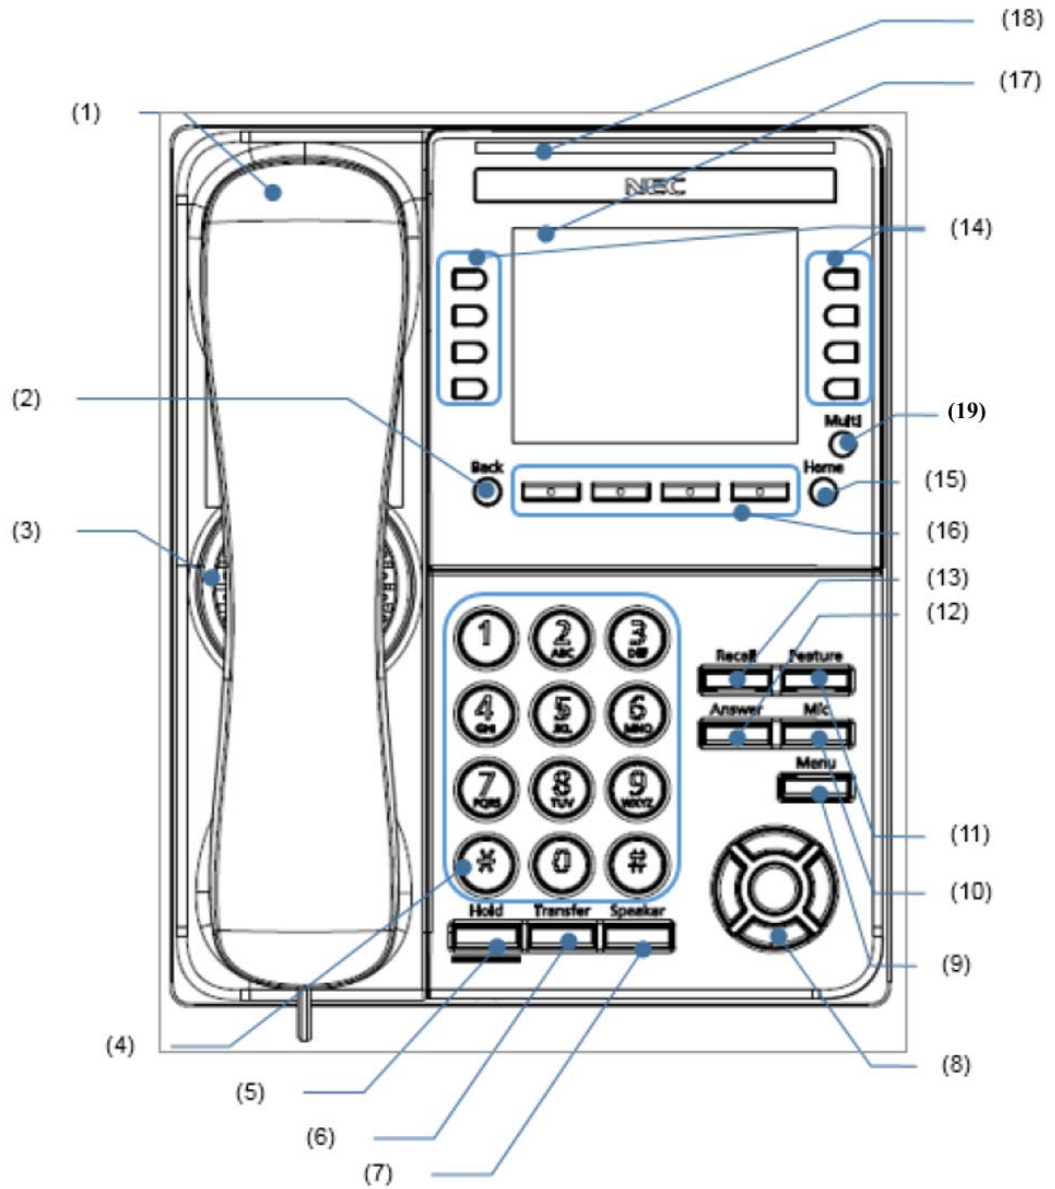

No.	Name	Function
(1)	Handset	Used to send/receive voice.
(2)	Back Key	To return to previous window.
(3)	Speaker	To Originate a call with handsfree.
(4)	Dial Keypad	To dial the called party number or feature access code.
(5)	Hold key	To place a call on hold.
(6)	Transfer key	Allows the terminal user to transfer established calls to another terminal, without attendant assistance.
(7)	Speaker Key (with light)	To control the built-in speaker which can be used for handsfree dialing or monitoring.
(8)	Cursor Key	To enter a selected item after navigating the menu. This key is also used to display the shortcut menu for frequently-used features. (Note: Only for classic mode) Volume (UP/DOWN) key To adjust speaker/receiver volume, and ringer volume while off-hook. To display the directory (DIR) by pressing the down key while on-hook. Right key (Directory) To access Last Number Redial. (Note: Only for classic mode) Left key (Redial) To display the Call History. (Note: Only for Classic Mode)
(9)	Menu Key	To access the menu of terminal. Only "Phone" and "Settings" icons function. Directory and History are not supported from this page and are accessed from the Cursor button.
(10)	Mic Key	MIC LED on Microphone is On, LED off Microphone is muted. LED must be on for handsfree response. MIC key also works for handset.
(11)	Feature Key (with light)	To activate features such as terminal setup and to program One-Touch Speed Calling keys.
(12)	Answer Key (with light)	To answer the incoming call, when LED on this key is lit.
(13)	Recall Key	To finish a call and hear the dial tone to make an another call (same as Flash Key).
(14)	Programmable Keys (with light)	These keys can be programmed as Flexible line key/ Programmable feature key by system administrator.
(15)	Home Key	To display the Utility menu or check the status of programmable keys press and hold this button. To check the status of a programmable key, press this button
(16)	Soft keys	The feature name is shown at the bottom of the LCD. The appropriate feature key is displayed on the screen according to the call handling process.

No.	Name	Function
(17)	LCD	To display date or dialed number, etc.
(18)	Call Indicator Lamp	The large LED at the top of the terminal flashes when receiving an incoming call. It also flashes indicating a voice mail message has been received.
(19)	Multi Key	To display the application switch screen.

3.2 Technical Specifications


Item	ITK-8LCX-1
LCD	3.5 inch TFT
LCD color	Color (16,770,000 colors)
Programmable Line/Feature Key	8 keys
Fixed Feature Key	13 keys (with Menu key and Cursor key)
Soft key	4 keys
Back Light	LCD and digit key (lit for 10 seconds when operating)
Phone Book	System : Max 90,000 records per system Personal : Max 1,000 records per terminal
Call History	Outgoing Call: Max 50 records per terminal Incoming Call: Max 50 records per terminal
XML Browser	Available
Handsfree	Available (Full duplex), Wideband support
Headset	Available (HW510 (A10) / HW251N (A10) / W710 (APD-80)
LAN Interface	2-port, 10BASE-T/100BASE-TX/1000BASE-T, Full-duplex/Half-duplex, Auto Negotiation/Fixed (Except 1000BASE-T)
Voice CODEC	G.711, G.729a, G.722
IP Address Setting	Sets via DHCP server/Sets Statically
QoS	ToS (IP Precedence, Diffserv)
VLAN	Tag VLAN (IEEE802.1Q/p), LLDP-MED, DHCP
Security	IEEE802.1x authentication (EAP-MD5, EAP-TLS), IEEE802.1x authentication support (EAPoL Forwarding) on the PC port via switch at a high hierarchy level, SIP&RTP Encryption, HTTPS (Web Programming/Download), VPN (L2TP/IPsec (IPv4))

Item	ITK-8LCX-1
Power Supply	Central Power Supply = IEEE802.3at Type1 (IEEE802.3af compatible)
Power Consumption	Max : About 3.75W, Standby : About 2.0W (without optional connection)
Download	Boot & Program / Config / Ringing Tone / Music on Hold / Phone Book / Phone Book list / Wallpaper / Voice confirmation tone
Adapter and Accessory (Option)	Wall Mount unit (WM) / Numbered Keypad
Dimension (WxDxH)	181(W) x 243(D) x 133(H)
Weight	About 1.0Kg
Environmental	Temperature range = 0° C to 40° C (32° F, to 104° F) Ambient temperature range = -20° C to 60° C (68° F to 140° F) Humidity = 10 to 90% RH (non-condensing)

* Dimensions are approximate.

3.3 Screen Layout and Key Functions

Figure 6 ITK-8LCX Display

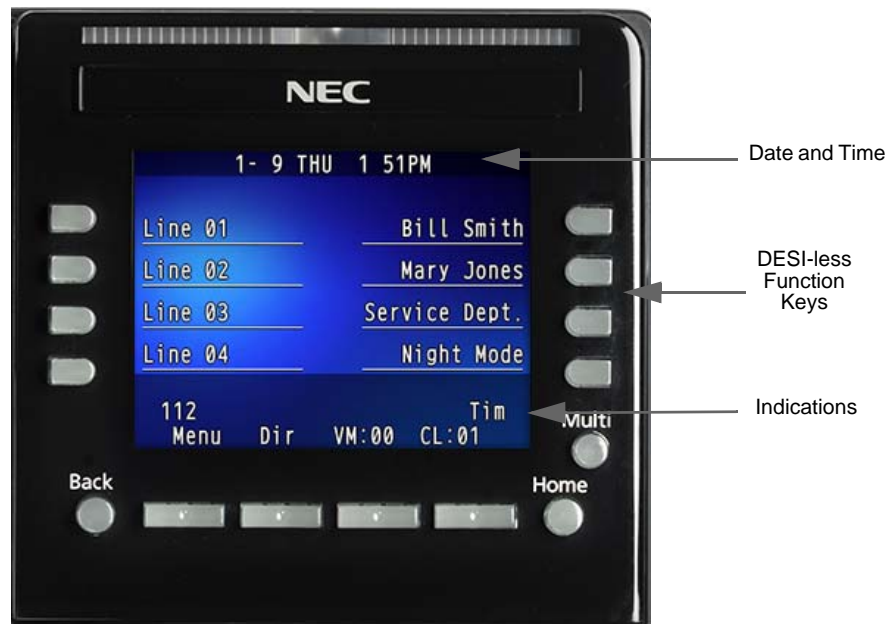

32 function keys (8 keys x 4 pages) additional programmable keys are provided (based on license). They can be programmed as Flexible Line/Programmable feature key by Telephony Server Administrator. For the SL2100, the programmable keys can be set by WebPro/ PCPro/Tel Pro and user can also set them.



NOTE

Maximum of 13 characters is supported.

3.3.1 Function Key Information

Function Key Information displays the following:


Key	Description	Maximum Digits to be Displayed
Line Key	Name and Number information	Refer to Note*
Feature Key	Feature Name	Refer to Note*
One Touch Speed Dial Key	- Speed Dial Name information - Number information	Refer to Note*

Note*: Maximum of 13 characters is supported.

3.3.2 LCD

The LCD (Liquid Crystal Display) provides SL2100 call information and Line Key activity. You will also find Date, Time and Softkey operation. The LCD on the ITK-8LCX has 128 character display and 3-line capability.


Figure 7 Example of Idle Display

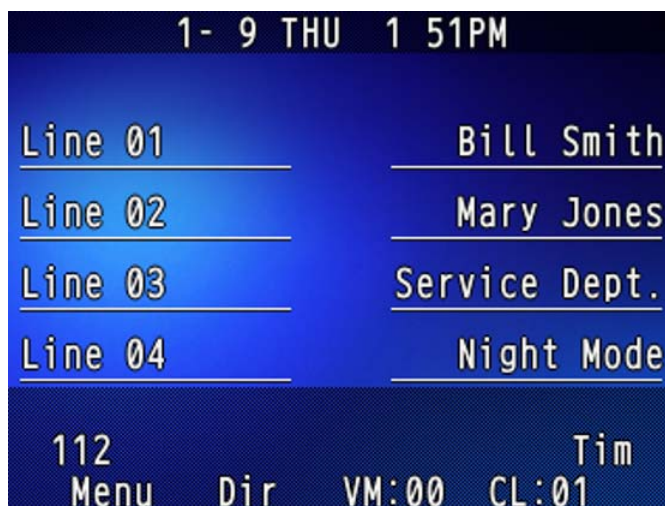

3.3.3 Menu Key

From the Menu key, the user can access various features by pressing the User settings icon.

Press the Menu Key and the User Menu will display. Use the Cursor to navigate to the User settings icon and press the center key. You will then be able to make changes to the User configuration.

Menu Item	Description
Menu	Press  to display the Menu screen.
History	Select this option to view the Call History data. Only applicable when DT920 extension is set to Standard mode in Program 15-02-60.
Directory	Not supported on SL2100.
Setting	Select this option to make the user setting on DT920.

Menu List for **History**

Menu Item	Description	Default Value
History	Redial and CID.	–

Menu List for **Setting - Classic Mode (ITK-8LCX)**

Menu Item	Description	Default Value
Setting		
1 User Setting	Select this option to configure the user setting of DT920.	–
1 Incoming Call	Select this option to set up for incoming calls.	–
1 Offhook Ring	Select this option to specify whether to use the Off-hook ringing.	Enable
2 Headset Ring	Select this option to specify whether to use the headset ringing.	Disable
3 Ring Tone	Select a ringer tone for External Call and Internal Call. (Automatic / Tone Type 1~14 / Download 1~3)	Automatic (Tone Type 1)
4 Illumination	Select this option to set the illumination pattern for External Call and Internal Call. (Automatic / Disable / Red / Green / Blue / Yellow / Purple Light Blue / White / Rotation)	Automatic (Red)
2 Talk	Select this option to set up for telephone conversation.	–
1 RTP Alarm	Select this option to specify whether to use the RTP alarm.	Automatic
2 DTMF Tone	Select this option to specify whether to use the DTMF tone.	Automatic
3 Key Touch Tone	Select this option to set the key touch tone generated when the digit keys are pressed while the telephone is off-hook.	Automatic (Tone)
4 Hold Music	Select a Music on Hold to be heard by DT920 user.	Default
5 Prefix	Select this option to register a Prefix number.	–

Menu Item	Description	Default Value
3 Display	Select this option to set up for the LCD display.	–
1 Calendar Format	Set calendar display format and time display format.	Automatic (12-hour format)
2 Local Volume	Specify whether to display the following volume levels: handset receiver volume, speaker volume, ringer tone volume and LCD contrast.	Automatic (Enable)
3 Screen Saver	Select this option to set up Screen Saver related data.	–
1 Screen Saver Mode	Select this option to specify whether to use a Screen Saver.	Enable
2 Wait Time	Select this option to specify the Wait Time to launch a Screen Saver.	30 min
4 Back Light	Select this option to set the brightness of the backlight. 1. Level 1 (Bright) ~ 4. Level 4 (Dark)	Level 2
5 Font Size	Select this option to change the font size displayed on an LCD.	Standard
1 Large		
2 Standard		
6 Language	Select this option to select a language to be displayed on an LCD.	Automatic
7 Advanced	Select this option to set up for the following additional data.	–
1 Wallpaper <i>Note: Wallpaper is not supported at this time.</i>	Select this option to specify the Home screen background (default/download)	Default
2 Font Color	Select this option to specify the font color for the Time Display/Feature Information Display area. *You can check the color by selecting each color number. (Color 1 ~ Color 16)	Color 16
3 Turn Off Display	Select this option to specify the data when turning off the display automatically.	–
1 Turn Off Display Mode	Select this option to set up for Turn Off Display Mode. (Disable/Enable/App Priority)	App Priority
2 Wait Time	Select this option to specify the time until turning off the display. (1-999 min.)	180 min
4 Backlight Fade Control	Select this option to specify whether Backlight Fade Control is in service, when turning on/off the backlight of the LCD. (Disable/Enable)	Enable
5 Home Frame	Select this option to set home frame.	Enable
4 Change Password	Select this option to change the password to lock/unlock the telephone.	0000
5 Security	Not used.	–
6 Usability	Select this option to set up for the operation of the Home key while Pop-up window is displayed.	–
1. Help Key Mode	Select this option to set up for Help Key Mode (1 SubMenu/2 Popup Window).	SubMenu
0 Setting Reset	Select this option to reset the telephone settings.	–


Menu Item	Description	Default Value
2 Download	Set the data required when downloading a file.	–
1 Download Files	Select this option to download files for Music on Hold, ringer tone, Directory and Wallpaper.	–
1 Hold Music	Select this option to download a file for Music on Hold.	MOH.wav
2 Ring Tone	Select this option to download files for ringer tones (Download 1 to 3).	–
1 Music Ring 1	Select this option to download a file for ringer tone (Download 1).	Melody1.wav
2 Music Ring 2	Select this option to download a file for ringer tone (Download 2).	Melody2.wav
3 Music Ring 3	Select this option to download a file for ringer tone (Download 3).	Melody3.wav
3 Directory	Not supported on SL2100.	Directory.csv
4 Wallpaper <i>Note: Wallpaper is not supported at this time.</i>	Select this option to download a file for Wallpaper.	WallPaper.bmp
2 Download Address	Select this option to enter an IP address of the FTP/TFTP/HTTPS server.	0.0.0.0
3 Protocol	Select this option to specify a protocol of the server (either FTP or TFTP or HTTPS).	FTP
4 Account Settings	Select this option to set necessary data when using FTP or HTTPS service.	–
1 User ID	Select this option to enter a user ID for downloading via FTP or HTTPS server.	–
2 Password	Select this option to enter a password for downloading via FTP or HTTPS server.	–
3 Folder	Select this option to specify the directory where the downloaded file is stored.	–
3 Data Backup/Restore	Select this option to set the data required for a file backup/restore.	–
1 Data Backup	Select this option to specify the file name to be backed up.	PersonalData.tgz
2 Data Restore	Select this option to specify the file name to be restored.	PersonalData.tgz
3 Server Address	Select this option to enter an IP address of the FTP/TFTP/HTTPS server.	0.0.0.0
4 Protocol	Select this option to select a protocol of the server (either FTP, TFTP or HTTPS).	FTP
5 Account Settings	Select this option to set necessary data when using FTP or HTTPS server.	–
1 User ID	Select this option to enter a user ID for the data backup via FTP or HTTPS server.	–
2 Password	Select this option to enter a password for data backup via FTP or HTTPS server.	–
3 Folder	Select this option to specify the destination directory of FTP or HTTPS server.	–

3.4 For Your Convenience

3.4.1 Programmable Function Keys

Programmable Function Keys can be assigned as “Trunk” Key and/or other Function Keys. You can just press the function key to activate the assigned function without dialing the Service Code.

Figure 8 DT920 – Programmable Function Keys

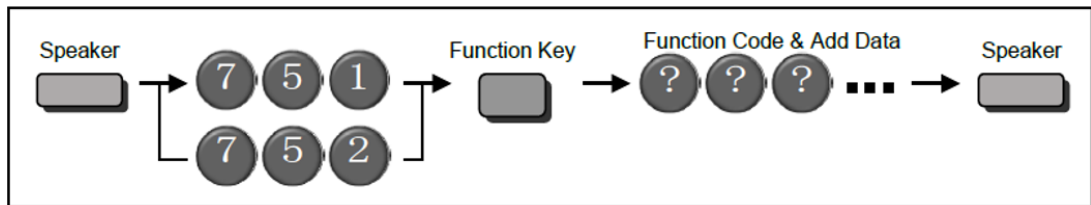


- There are 2 levels of Function Keys. (General Keys : assigned by **751**, Appearance Keys : assigned by **752**)
- Appearance Keys have priority. You can overwrite the Appearance Key at the General Key.
- If you want to overwrite the General Key at the Appearance Key, you have to erase the Appearance Key by dialing **752 + 000** before General Key assignment.
- In the default setting, Programmable Function Key No. 1 to 12 is assigned as “Trunk” Key. If you want to assign Function Keys (General) at the unused Trunk Keys, these unused keys should be erased by **752 + 000** operation.
- Programmable Function Keys can be erased by dialing **752 + 00** or **751 + 00**.
- Programmable Function Keys can be assigned by Soft Key operation as well.

3.4.2 DSS/One-Touch Keys

Programmable Function Keys can be assigned as DSS (Direct Station Selection) or One-Touch Keys. You can place an Outside / Intercom Call by just pressing this key without dialing the number.


Figure 9 DSS/One-Touch Keys

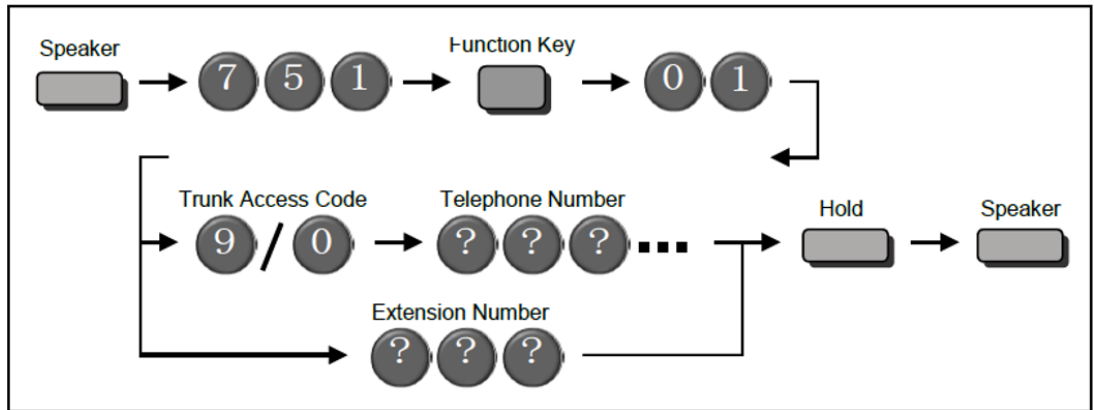

- To change the Trunk Access Code, Ask your NEC Authorized Supplier for the details.
- In the default setting, Programmable Function Key No. 1 to 12 is assigned as “Trunk” Key. If you want to assign DSS Keys at the unused Trunk Keys, these unused keys should be erased by **752 + 000** operation before the above operation.
- In case of DSS Key, the extension status can be indicated on the BLF. (idle : extinguished, Busy : lit).
- When you register a telephone number, the Trunk Access Code should be added in front of the number.
- Up to 36 digits dialing can be registered, but the name can not be registered.
- If you want to continue the operation, press Programmable Function Key instead of Speaker Key to finish.
- One-Touch Keys can be assigned by Soft Key operation as well.

3.4.3 Abbreviated Dial (Speed Dial) Registration

Figure 10 Abbreviated Dial (Speed Dial) Registration Keys

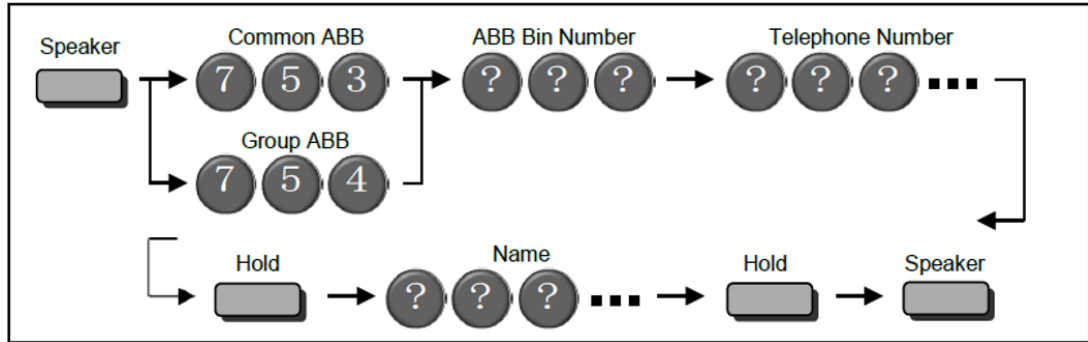


- The digit of Bin No. depends on the system setting. (0-9<Only Group ABB> / 00-99 / 000-999)
- System setting is necessary for Group ABB function. Ask your NEC Authorized Supplier for the details.
- Name can be entered by Dial Pad Keys. (See below)
- Up to 36 digits dialing can be registered, and up to 12 characters can be registered as name.
- If you want to continue the operation, dial Bin No. instead of Speaker Key to finish.
- You can skip to enter the name. (No enter any character, then press **Hold** Key).
- You can erase the registered number & name by pressing **Exit** Key after dialing Bin No.
- Common Abbreviated Dial can be registered by Soft Key / Cursor Key operations as well.

3.4.4 Entering Alphanumeric Characters

When you enter a name, use Dial Pad Keys to enter letters as below. For example, press 2 key once for A, twice for B, etc...

Figure 11 Alphanumeric Characters

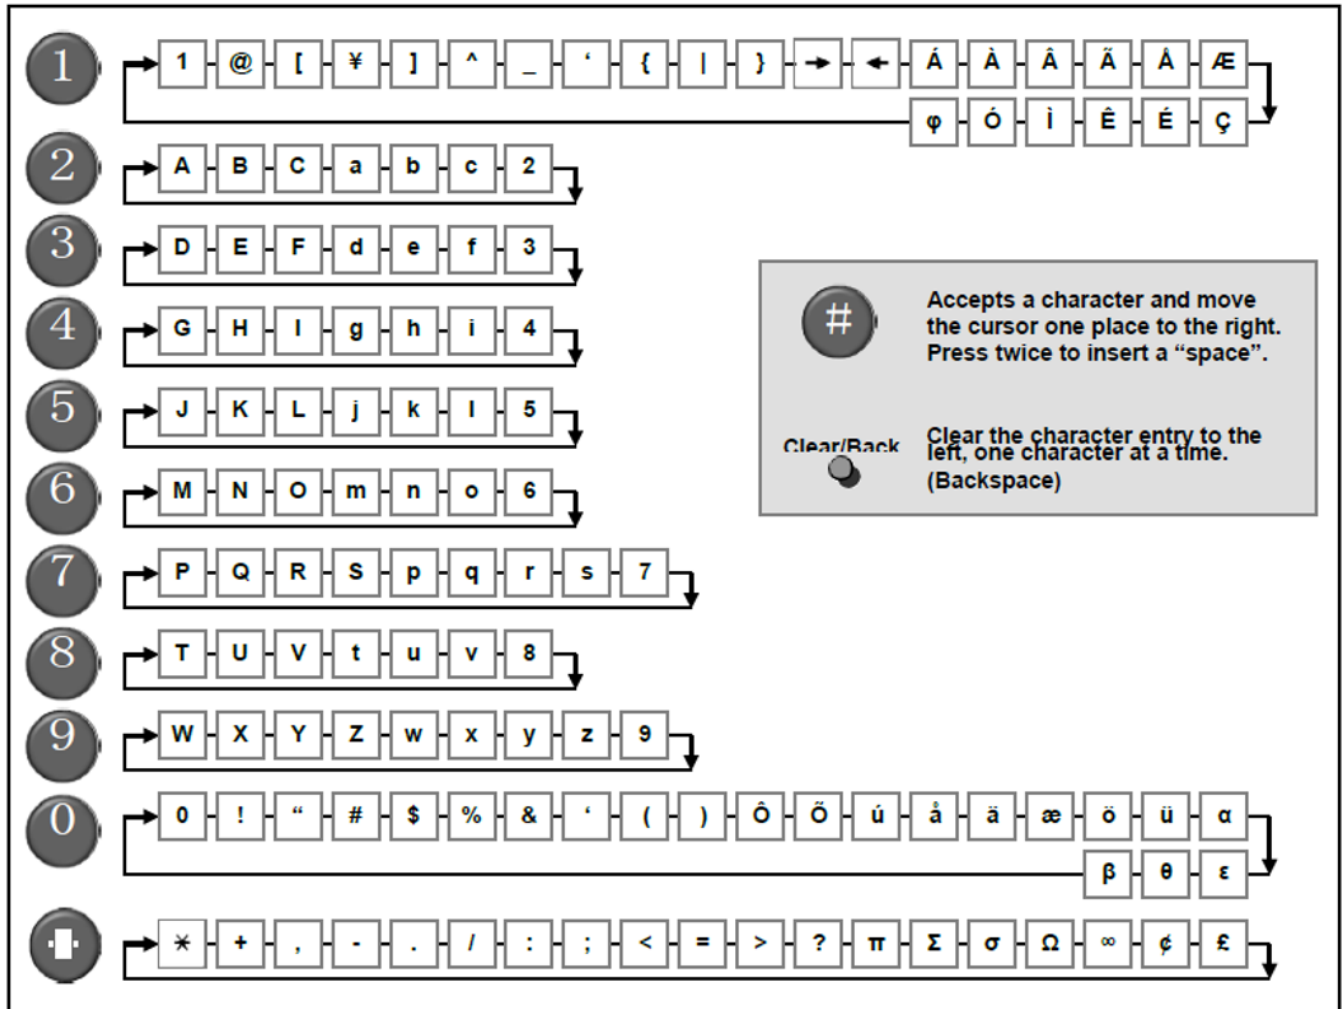


SECTION 4 CALLING FEATURES

4.1 Placing Calls

4.1.1 Place an Outside Call (Quick Access)


Figure 12 Placing an Outside Call Using Quick Access

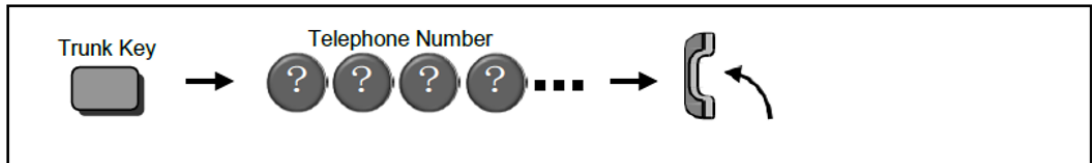

- Listen to the Dial Tone before dialing a Telephone Number.
- You can have function keys for Trunks or Trunk Groups. Ask your NEC Authorized Supplier for the details.

4.1.2 Place an Outside Call (Access by Code)


Figure 13 Placing an Outside Call Using an Access Code

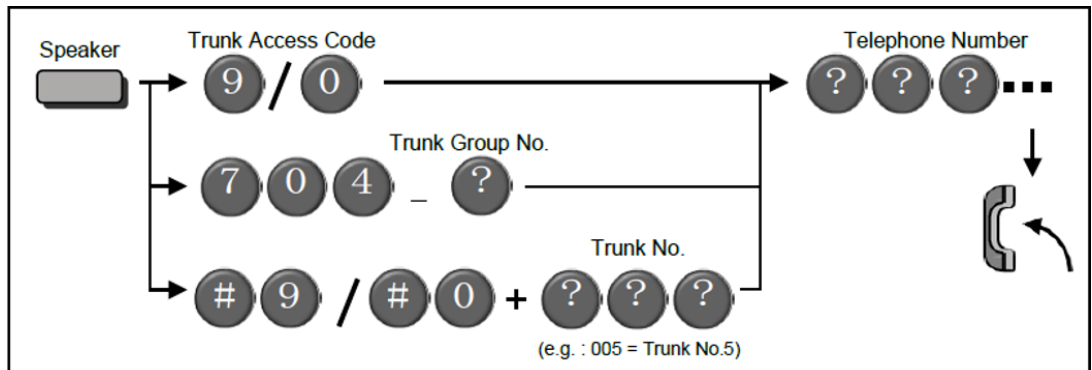

- To change the Trunk Access Code, Ask your NEC Authorized Supplier for the details.
- Listen to the Dial Tone before dialing a Telephone Number.
- In case the number of Trunk Group is more than 10, you should enter 2 digits (e.g. 11 : Group 11) after dialing **704**. Ask your NEC Authorized Supplier for the details.
- For the dial digit of Trunk No., ask your NEC Authorized Supplier for the details.

4.1.3 Place an Intercom Call (Dial Access)

Figure 14 Placing an Intercom Call Using Dial Access

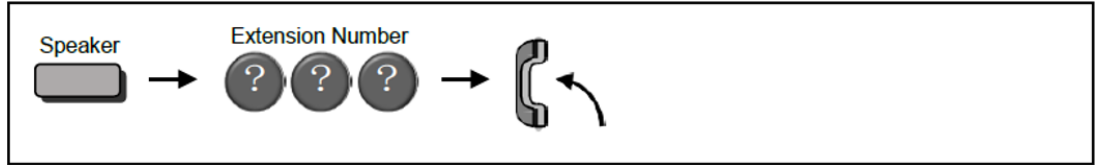


- ❑ Your call will ring or voice-announce. If you hear ringing, wait for an answer. If you hear a beep, begin speaking. Dialing **1** changes voice/ring mode. (in case the destination is Multi-line Terminal)

4.2 Placing Calls Quickly

4.2.1 Directory Dialing


Figure 15 Directory Dialing

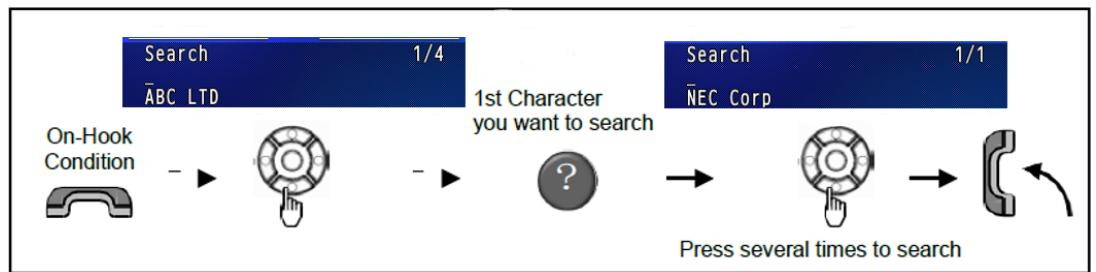

- ❑ After searching the desired destination, press **Enter** Key to confirm the telephone number before lifting the handset, if necessary.
- ❑ You can enter more Characters (up to 12) to make desired destination's search even more specific.
- ❑ You can also search the desired destination without entering the Characters. (press Cursor Keys only)
- ❑ To cancel the Directory Dialing operation, press **Clear/Back** Key.
- ❑ Directory Dialing can be activated by Soft Key operation as well.

4.2.2 Last Number Dialing


Figure 16 Last Number Dialing

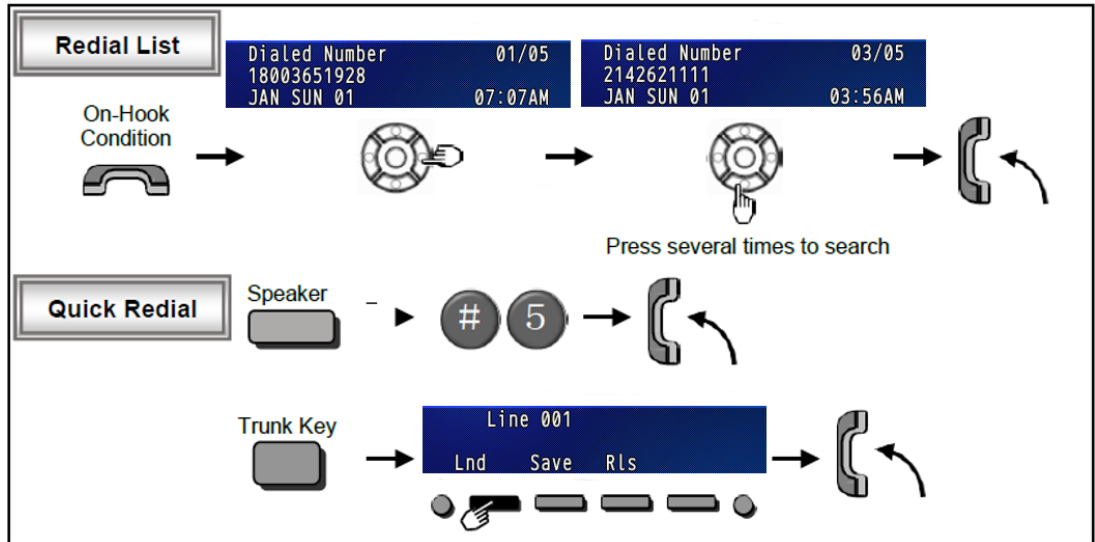

- The system retains the last 10 numbers dialed which can be reviewed and redialed.
- To cancel the Redial List operation, press "Clear/Back Key."

4.2.3 Callback by Received Number


Figure 17 Callback Using Received Number

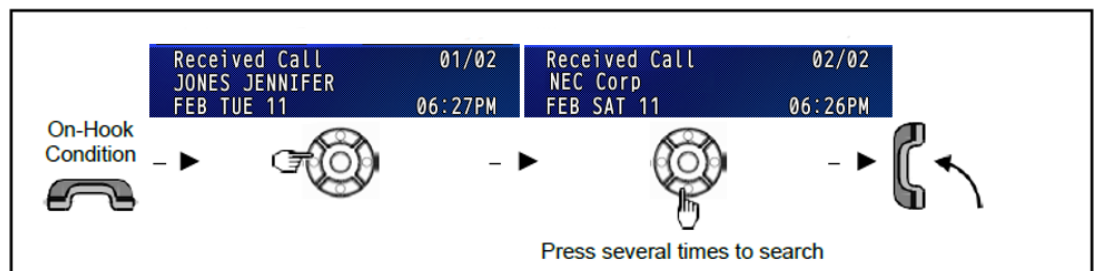

- Caller-ID function is required to use this operation for outside calls. Ask your NEC Authorized Supplier for more details.
- To cancel the Callback operation, press **Clear/Back Key**.

4.2.4 Abbreviated (Speed) Dialing <for Outside>


Figure 18 Abbreviated Speed Dialing for Outside Call

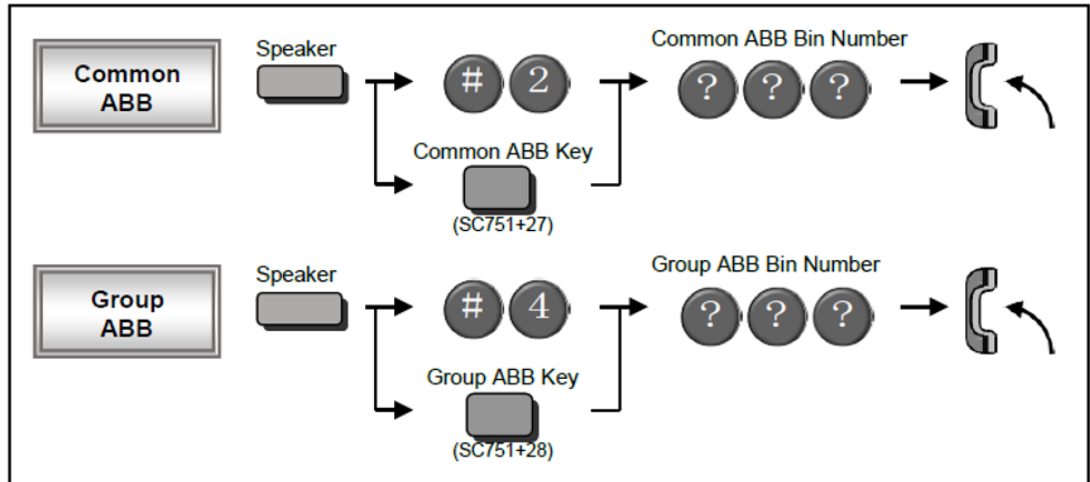

- The digit of Bin No. depends on the system setting. (0-9 <Only Group ABB> / 00-99 / 000-999)
- Telephone Numbers should be pre-registered to the system.
- System setting is necessary for Group ABB function. Ask your NEC Authorized Supplier for the details.
- When you assign the Common ABB Key on the Programmable Function Key, **Press HOLD** is required after dialing the Function Code27.

4.2.5 One-Touch / DSS Call

Figure 19 One-Touch / DSS Call

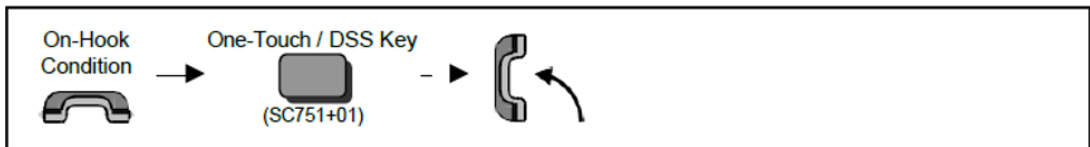


- Telephone / Extension number should be pre-registered to a One-Touch / DSS Key.
- Trunk Access Code should be added in front of the Telephone number.

4.3 If Your Call Doesn't Go Through...

4.3.1 Set Camp On / Callback

Figure 20 Set Camp On or Callback

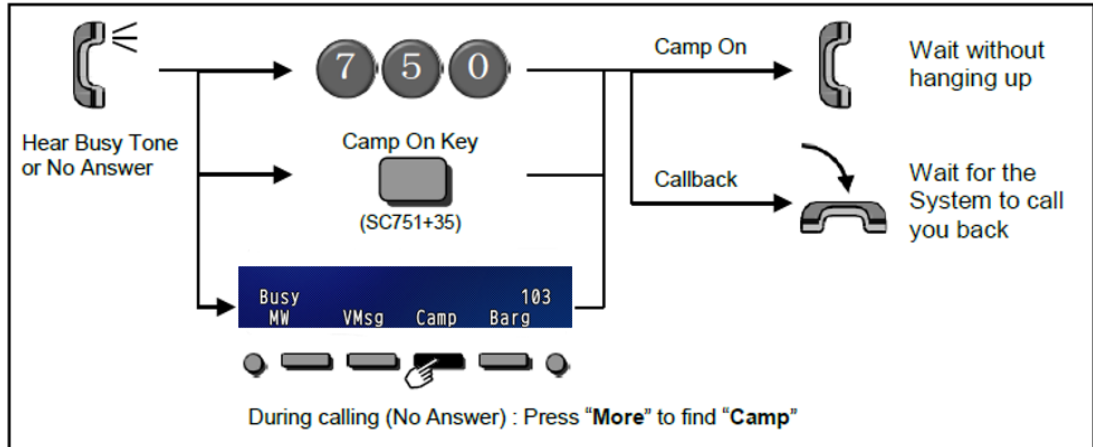


- Camp On In case of Intercom Call, when you hear ringing, wait for the called party to answer.

In case of Outside Call, when you hear Dial Tone, begin telephone number dialing.
- Callback In case of Intercom Call, when your terminal starts the ringing, lift handset and wait for the called party to answer.

In case of Outside Call, when your terminal starts the ringing, lift handset, hear Dial Tone, and begin telephone number dialing.
- This function is applicable in case all trunks are busy condition. (not applicable for dialed outside party busy)


4.3.2 Cancel Camp On / Callback

Figure 21 Cancel Camp On or Callback

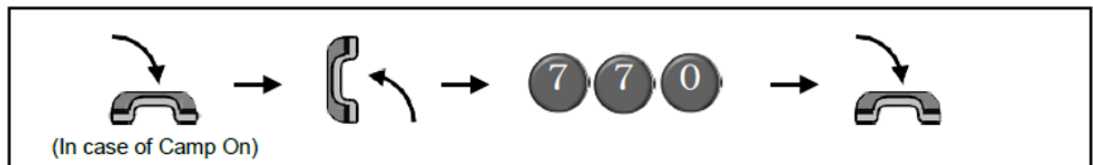

4.3.3 Repeat Dialing (Outside Call Only)


Figure 22 Repeat Dialing for Outside Call

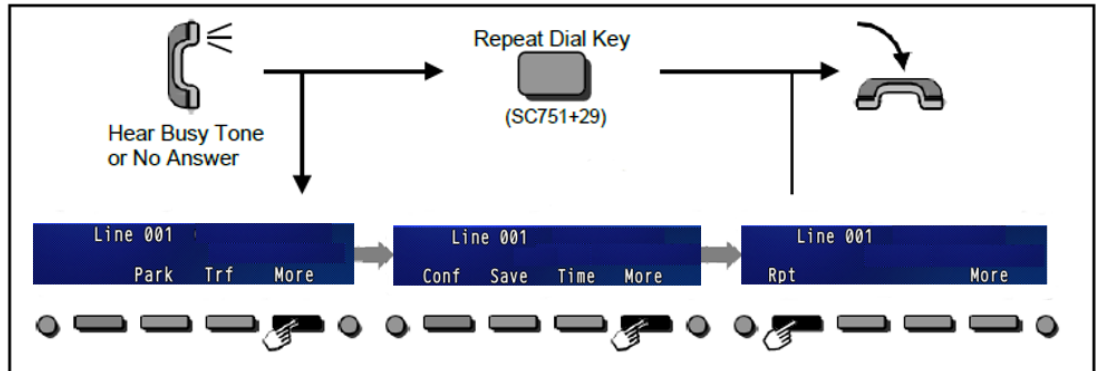

- When the Repeat Dialing is set, Repeat Dial Key shall flash and the system automatically and periodically redials a call. Repeat duration is programmable. Ask your NEC Authorized Supplier for the details.
- You should lift the handset when the called party answered.
- Press flashing Repeat Dial Key to cancel.

4.3.4 Answer Message Waiting (Terminal Indicator is Flashing Red)


Figure 23 Answer Message Waiting When Indicator Flashes Red

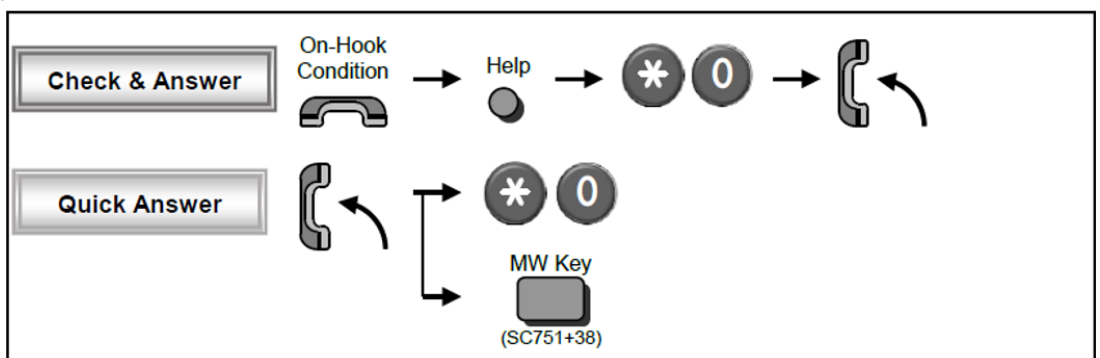

- When you answer a MW, the Indicator shall automatically be off when the called party answers.
- If multiple message are in queue, you can select the desired party by pressing Up key after dialing " , 0", if several number of Message Waiting has been set.
- If Message Waiting is on due to a Voicemail Message. Press VM softkey to enter Voicemail. Once the Voicemail Message is deleted it will clear the Message Waiting lamp.

4.3.5 Cancel Message Waiting


Figure 24 Cancel Message Waiting

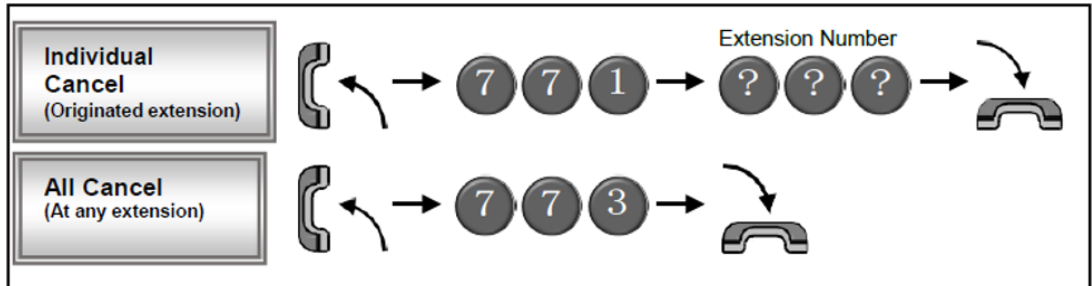

4.4 Answering Calls

4.4.1 Answering an Outside Call


Figure 25 Answering an Outside Call

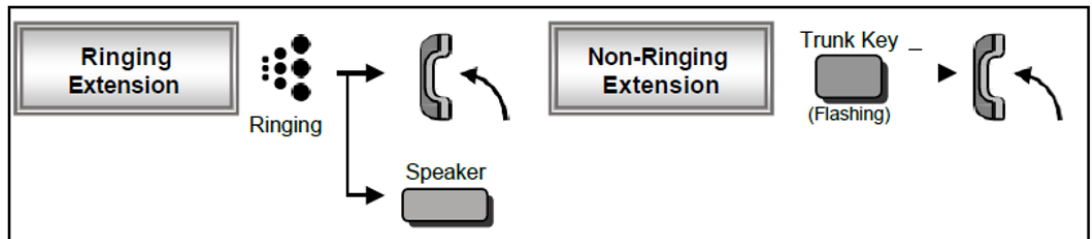

- ❑ Confirm the status of MIC Key if you want to answer by Handsfree. (If MIC Key is **On**, the microphone is On and Handsfree is possible. If MIC Key is **Off**, the microphone is muted.)

4.4.2 Answering an Intercom Call

Figure 26 Answering an Intercom Call

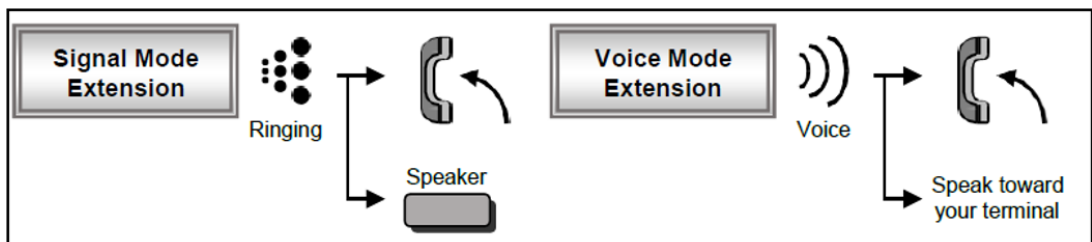


- ❑ Intercom Call Mode (Signal or Voice) can be set at your terminal by :
 "Signal" : **Speaker -> 723** "Voice" : **Speaker -> 721**

- ❑ Confirm the status of MIC Key if you want to answer by Handsfree. (If MIC Key is **On**, the microphone is On and Handsfree is possible. If MIC Key is **Off**, the microphone is muted.)

4.4.3 Picking up a Call for Other Extensions

Figure 27 Pick Up Call for Other Extensions

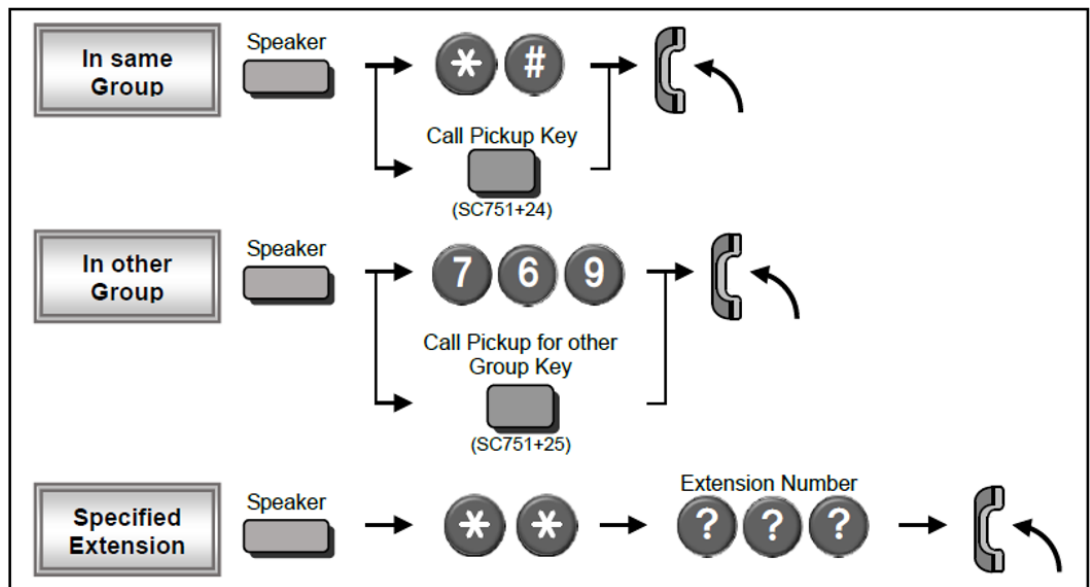


- ❑ System setting is necessary to create a Call Pickup Group. Ask your NEC Authorized Supplier for the details.
- ❑ Call Pickup operations are available using Soft Key operation.

4.5 Hold / Transferring Calls

4.5.1 Holding a Call / Retrieving a Held Call


Figure 28 Holding a Call or Retrieve a Held Call

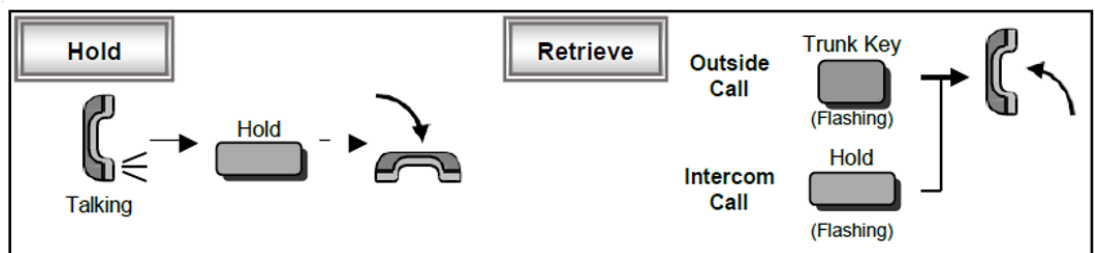

- In case of Intercom, the call shall be held as “Exclusive Hold” on your terminal.
- This operation puts your outside call on System Hold. Other extension user can take the call off Hold.

4.5.2 Holding a Call Exclusively


Figure 29 Holding a Call Exclusively

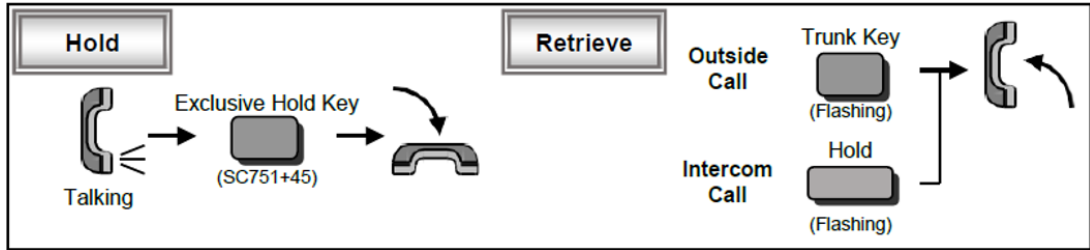

- This operation puts your outside call on Exclusive Hold. Other extension user can not take the call off Hold.

4.5.3 Retrieve a Held Outside Call


Figure 30 Retrieve a Held Outside Call

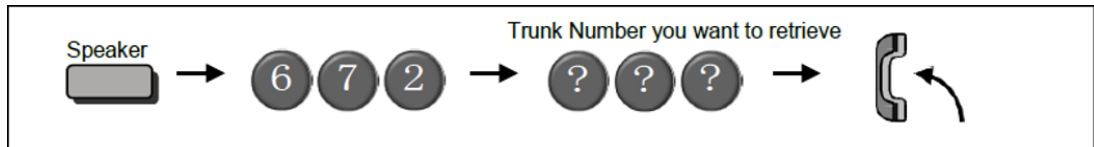

- Ask your NEC Authorized Supplier for the details about your Trunk Number dialing digits.

4.5.4 Transferring a Call to the Other Extension

Figure 31 Transfer Call to Other Extension

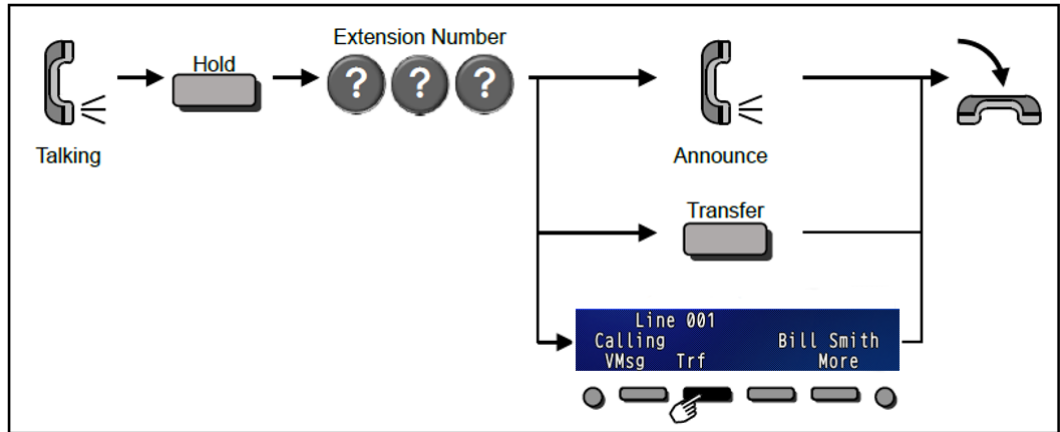


- ❑ If your terminal has DSS/One-Touch key, just press it instead of “HOLD” and “Extension Number” dialing.

4.6 For More Convenient Use...

4.6.1 Do Not Disturb (DND)


Figure 32 Do Not Disturb

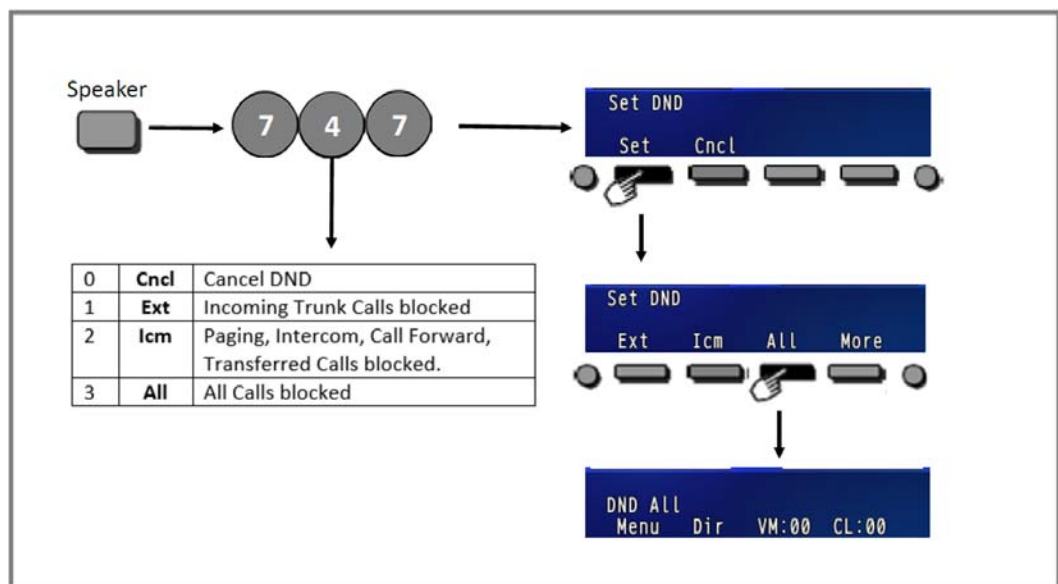

- ❑ When you set DND function, the Internal Dial Tone pattern will change.

4.6.2 Conference

Figure 33 Holding a Call Exclusively

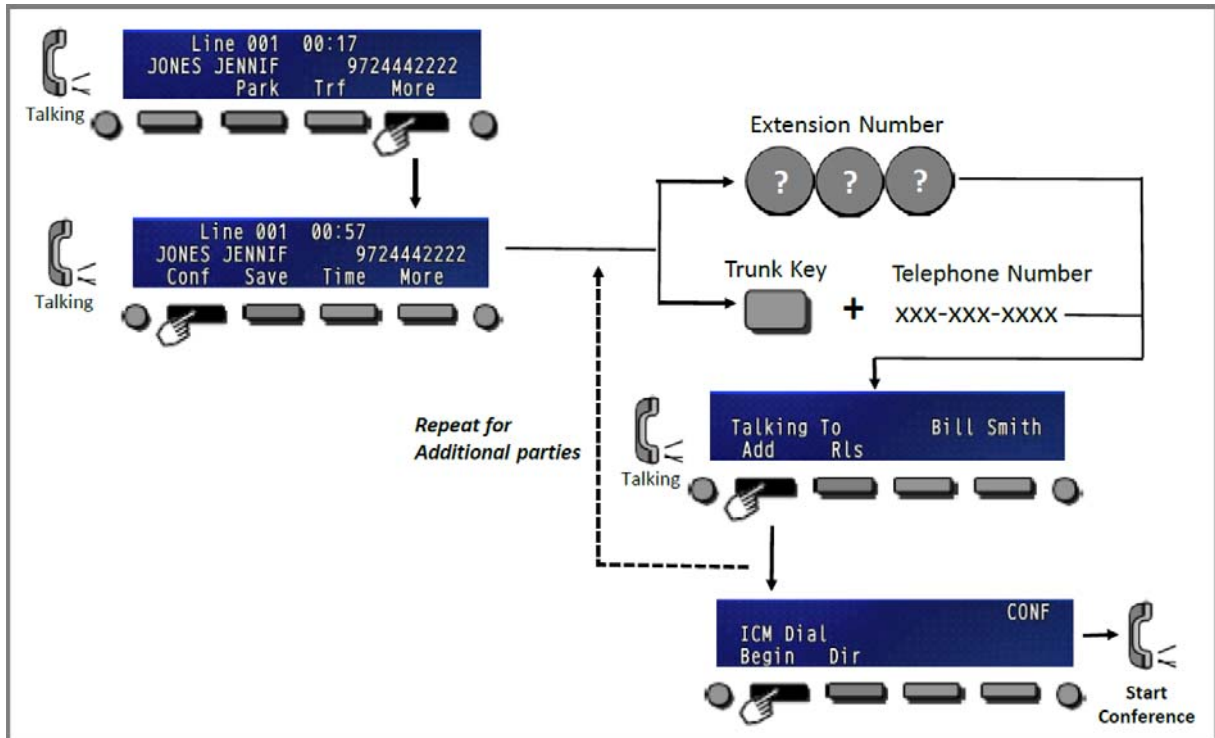

- You can repeat this operation to add more parties.
- You may be able to have up to 16 parties. (include your terminal) You may need to adjust the volume level due to the Environment where calls are placed. Ask your NEC Authorized Supplier for the details.

4.6.3 Call Forwarding / Follow Me

When you set Call Forward / Follow Me, the destination extension shall be displayed on the LCD, and the Internal Dial Tone pattern shall be changed. (Call Forward / Follow Me can be set by Soft Key as well)

Figure 34 Call Forward Immediate

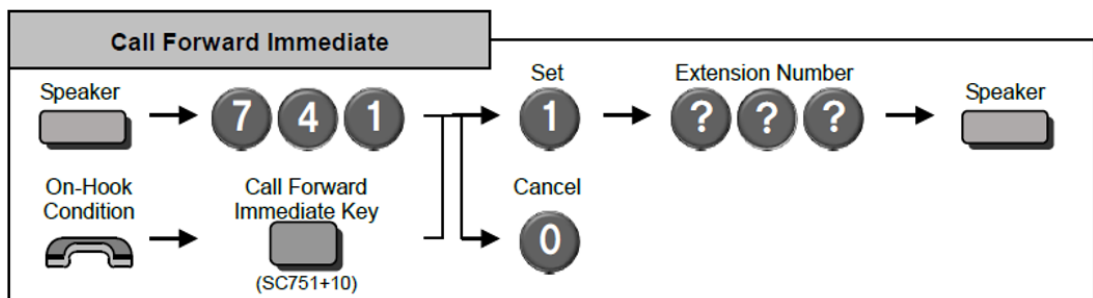


Figure 35 Call Forward When Busy

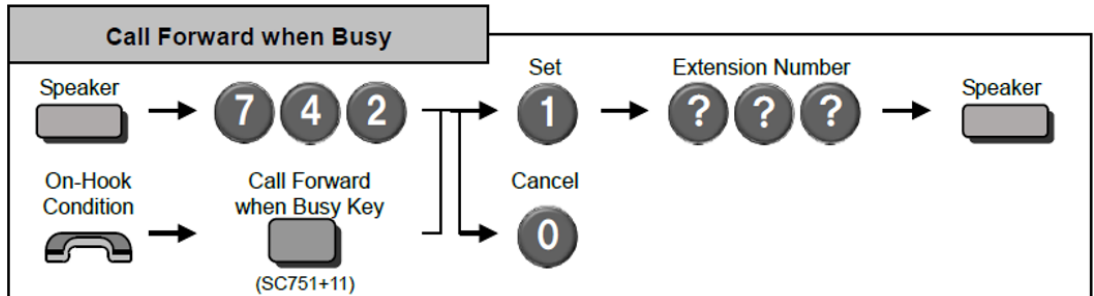


Figure 36 Call Forward No Answer

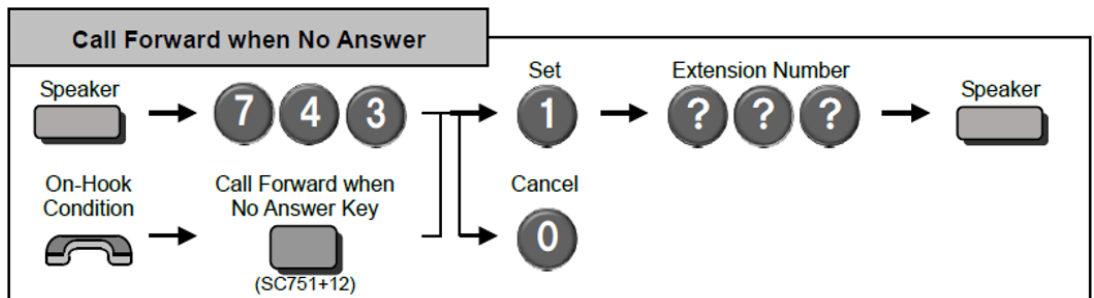


Figure 37 Call Forward Busy / No Answer

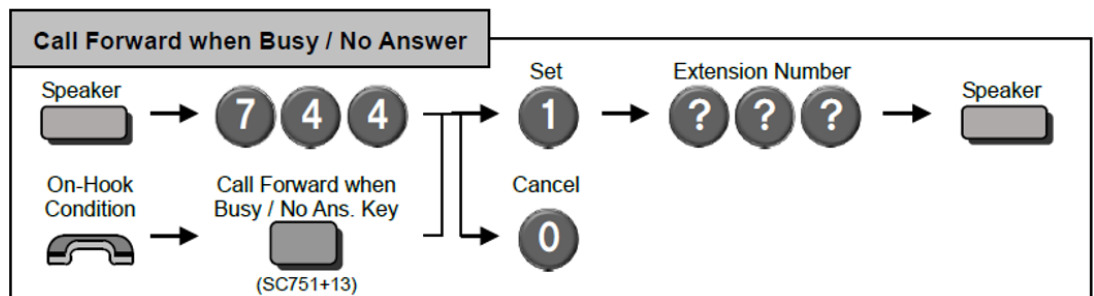


Figure 38 Call Forward Both Ring


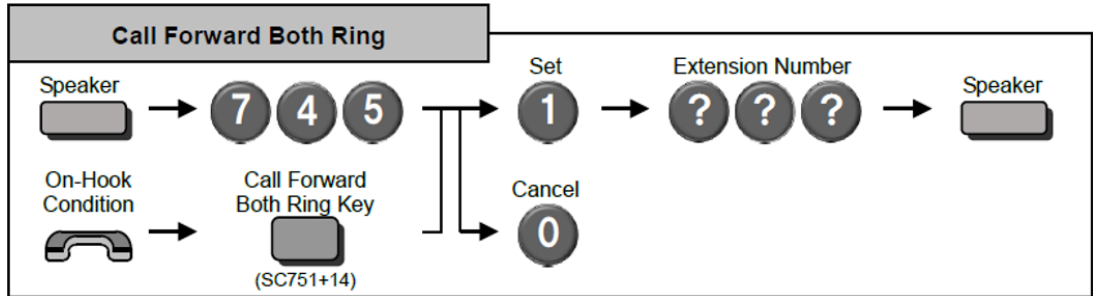


Figure 39 Call Forward Follow Me

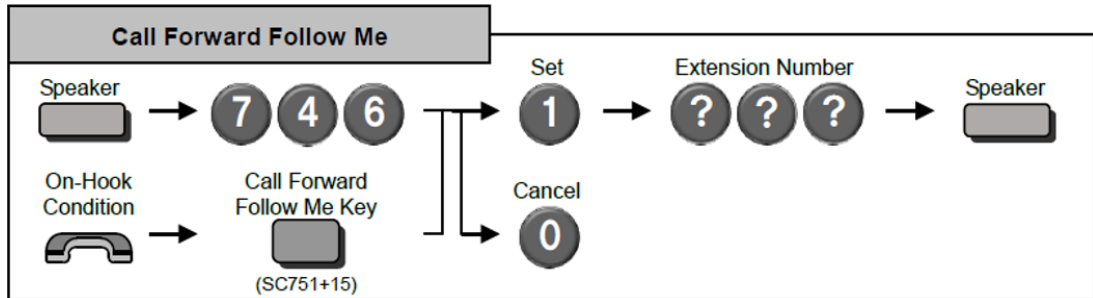

SECTION 5 SOFT KEYS OPERATION – DEFAULT ADVANCED MODE 2

5.1 Menu Soft Key

Figure 40 Menu Soft Key


The following table shows the menu structure of "Menu" Soft Key. You can reach the desired feature by following operation.

It is possible to search the desired feature by pressing the Cursor key and then press keys (Up / Down / Right / Left) several times instead of "Prev" or "Next" Soft Keys. It's also possible to access the desired feature directly by dialing the 2 digit Menu Code after pressing the "Menu" Soft Key.

Item	Menu Code	Next Operation after pressing the "Select"
10 : Volume Preferences	11 : Ring 12 : Off-Hook Ring	Press "Down" or "Up" to adjust the selected option.
20 : Display Preferences	21 : Contrast 22 : Minimum Brightness 23 : Maximum Brightness	Press "Down" or "Up" to adjust the selected option.
30 : Feature Preferences	31 : Voice Announce 32 : Handsfree Reply 33 : Automatic Call Timer 34 : Preview Dial 35 : Illuminated Dialpad 36 : Auto Call Screening 37 : Incoming Page 38 : Ringing Line Preference	For the selected option, press "On" (enable) or "Off" (disable).
40 : Ring Preferences	41 : Intercom 42 : Line Keys 43 : Each Line Keys	Press "<<" or ">>" to select and save option.
50 : Key Assignments	51 : Feature Keys 52 : Primeline Key	Press "<<" or ">>" to select and save option.
60 : Call Forwarding	61 : Immediate 62 : Ring No Ans 63 : Busy No Ans 64 : Call Forward AME 65 : Display Message 66 : Follow Me 67 : Both Ring	Press "Set" or "Cancel", enter the destination and select option to save.
70 : Speed Dial	71 : Personal Speed Dial 72 : Company Speed Dial	Enter Bin number and Phone number, Name and save.
80 : Name and Language	81 : Extension Name 82 : Display Language	For Name, enter the name using Alphanumeric Characters, For Language, press "<<" or ">>" to select and save.
90 : Option Preferences	91 : Headset Mode 92 : Headset Voice Announce 93 : System Information 94 : VoIPDB Information 95 : Not Used 96 : IP Address Information 97 : IP Phone log off 98 : Change login password	For Headset option, press "On" (enable) or "Off" (disable). For System / VoIPDB information (IP Address, MAC Address), press "Select".
00 : Admin	01 : Time 02 : Date 03 : Extension Name 04 : Clear All Call Fwd 05 : System Night Key Mode	For Time, Date and Extension Name, enter the Time, Date and Extension Number and Name to save. For Clear All Call Fwd, press "Yes".

5.2 Dir Soft Key

Figure 41 Holding a Call Exclusively

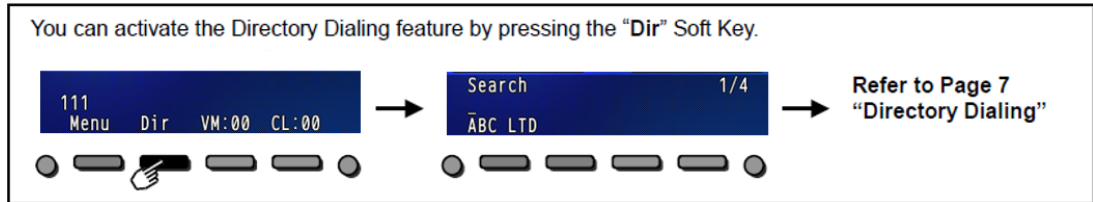

5.3 VM Soft Key

Figure 42 VM Soft Key

Number of new messages in your mailbox is displayed on the "VM" Soft Key; you can access your mailbox by pressing this key.

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Lstn	Listen to Left Messages	Press "Next" to play next message, press "Rplay" to repeat played message, press "Del" to delete played message. Press "More" for other Mailbox features.
Greet	Mailbox Greeting	Press one of "Gr1" / "Gr2" / "Gr3" to choose the desired personal greeting message, and press "Lstn" (Listen) / "Rec" (Record) / "Del" (Delete) to maintain it.
LvMsg	Leave Message	Start message recording and press "Done" to complete it. Dial extension number you want to send this message and press "Send".
Setup	Mailbox Option Menu	Press "Code" (Security Code) / "Notfy" (Message Notification) / "CallH" (Call Handling Option) / "ATime" (Auto Time Stamp) to maintain each mailbox option.
RcNam	Name Menu	Press "Lstn" (Listen) / "Rec" (Record) / "Del" (Delete) to maintain the Mailbox Name.
Page	Page Message Menu	Press "Lstn" (Listen) / "Rec" (Record) / "Del" (Delete) to maintain the Paging Message.
List	Message List	Press "All" / "New" / "Arch" to set the message listen mode (message list) which you want to listen.
Exit	Exit VM Menu	---

5.4 CL Soft Key

Figure 43 CL Soft Key

Number of new unanswered calls is displayed on the "CL" Soft Key; you can access your Caller-ID List by pressing this key.

Soft Key Indication	Feature	Next Operation after pressing Soft Key
All	All Incoming Calls List	See below
Unan	Unanswered Calls List	See below
Del	Delete List	Press "Yes" to delete all Caller-ID List. (or press "No" to cancel)
Exit	Exit from Summary	---

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Call	Call to displayed number	Lift the handset to talk when the destination answered.
Store	Store displayed number	Press "STA" (Personal Speed Dial) or "Abb" (Common Abbreviated Dial), and dial Bin Number to store the displayed number with name. (Press Hold Key to save.)
Del	Delete displayed number	Next received Caller-ID shall be automatically displayed, and continue the Caller-ID Soft Key operation.
Edit	Edit displayed number	Press "<->" to change the cursor position, press "DEL" to delete a digit, and dial new digit. (Press Hold Key to save.) Press "CNCL" to cancel Edit Mode.
Back	Return to Summary	Continue the Caller-ID Soft Key operation.

5.5 Soft Key Operations During Off-Hook Condition

Figure 44 Operations During Off-Hook Conditions

When you press the Speaker Key or lift the handset, you will see the following Soft Keys.

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Dir	Directory Dialing	Refer to Page 7 for Directory Dialing operation.
Page	Paging	Press "InPg" (Internal Paging) or "ExPg" (External Paging), and dial the Group/Zone number to page.
Pkup	Call Pickup	Press "Pers" for Extension Call Pickup. Press "ExPg" for External Paging pickup Press "InPg" for Internal Paging pickup
VM:00	Mailbox Access	Refer to Page 17 (VM Soft Key)
Barg	Barge-In	Dial the target extension number to barge in.
Save	Saved Number Dial	Saved number is dialed automatically. Wait for answer.

5.6 Soft Key Operations During Intercom Calling

Figure 45 Operations During Intercom Calling

During Intercom calling (called party does not answer yet), you will see the following Soft Keys.

Soft Key Indication	Feature	Next Operation after pressing Soft Key
MW	Message Waiting	Message Waiting is set. Hang up to finish.
Voice (Signal)	Intercom Call Mode Switching (Signal / Voice)	Signal -> Voice : Start to talk after beep tone. Voice -> Signal : Wait for called party answer. Press "Voice" (or "Signal") again to switch Call Mode, if necessary.
Rls	Hang Up	- - -
VMsg	Leave a Message (In-Mail) (Option)	Start recording your message.
Camp	Camp On / Callback	<u>Camp On</u> Wait for the system to call you back without hanging up. <u>Callback</u> Hang up and wait for the system to call you back.


5.7 Soft Key Operations After Establishing an Intercom Call

Figure 46 Operations After Intercom Call Established

After establishing an Intercom call, you can use following feature by Soft Key.

Talking To 103

Conf




Refer to Page 13
"Conference"

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Conf	Conference	Dial the desired extension number, or seize an idle trunk and place a call to establish a conference. Press "Conf" to invite the other party, or press "Add" and "Begin" to start a conference. Press "AnHd" to retrieve a held call.

5.8 Soft Key Operations During Outside Call


Figure 47 Operations During Outside Call

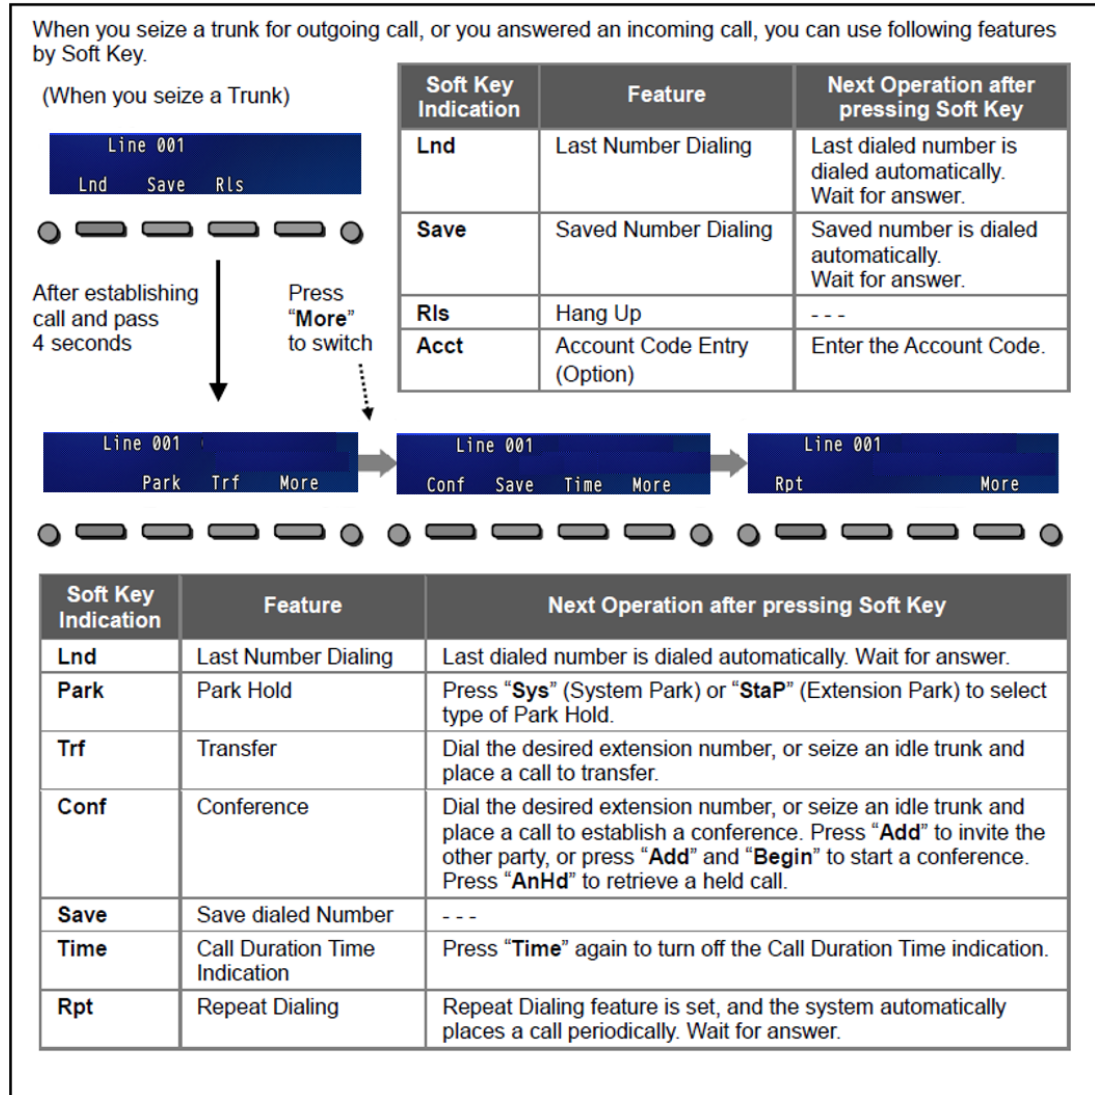

SECTION 6 CURSOR KEY OPERATION

6.1 Menu Structure When PRG 15-02-60 is Set to Standard Mode

Figure 48 Program 15-02-60 Set to Standard Mode

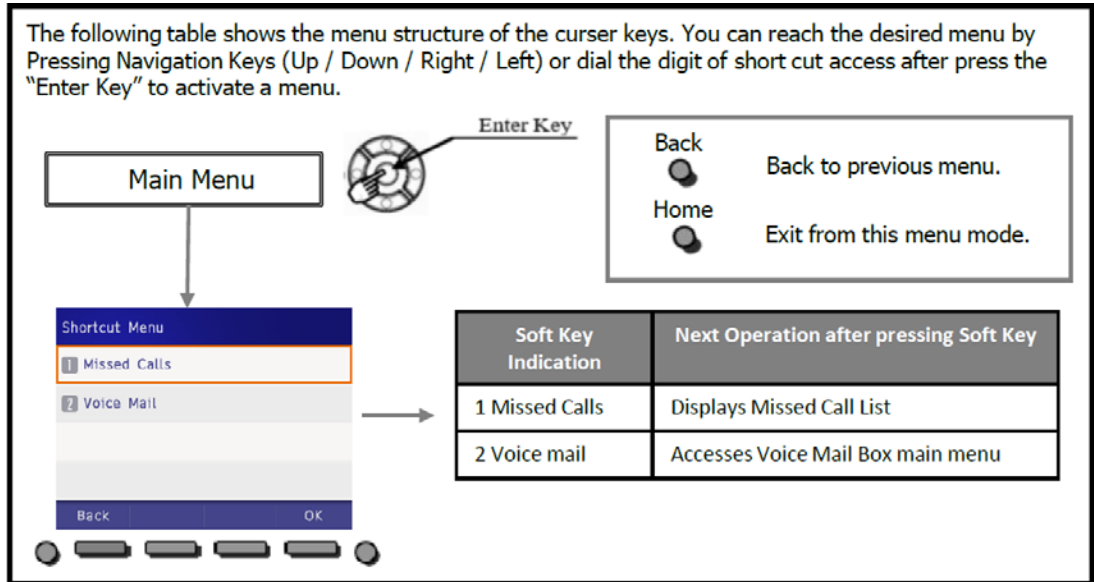

6.2 Menu Structure When PRG 15-02-60 is set to Advanced Mode 1

Figure 49 Program 15-02-60 Set to Advanced Mode 1


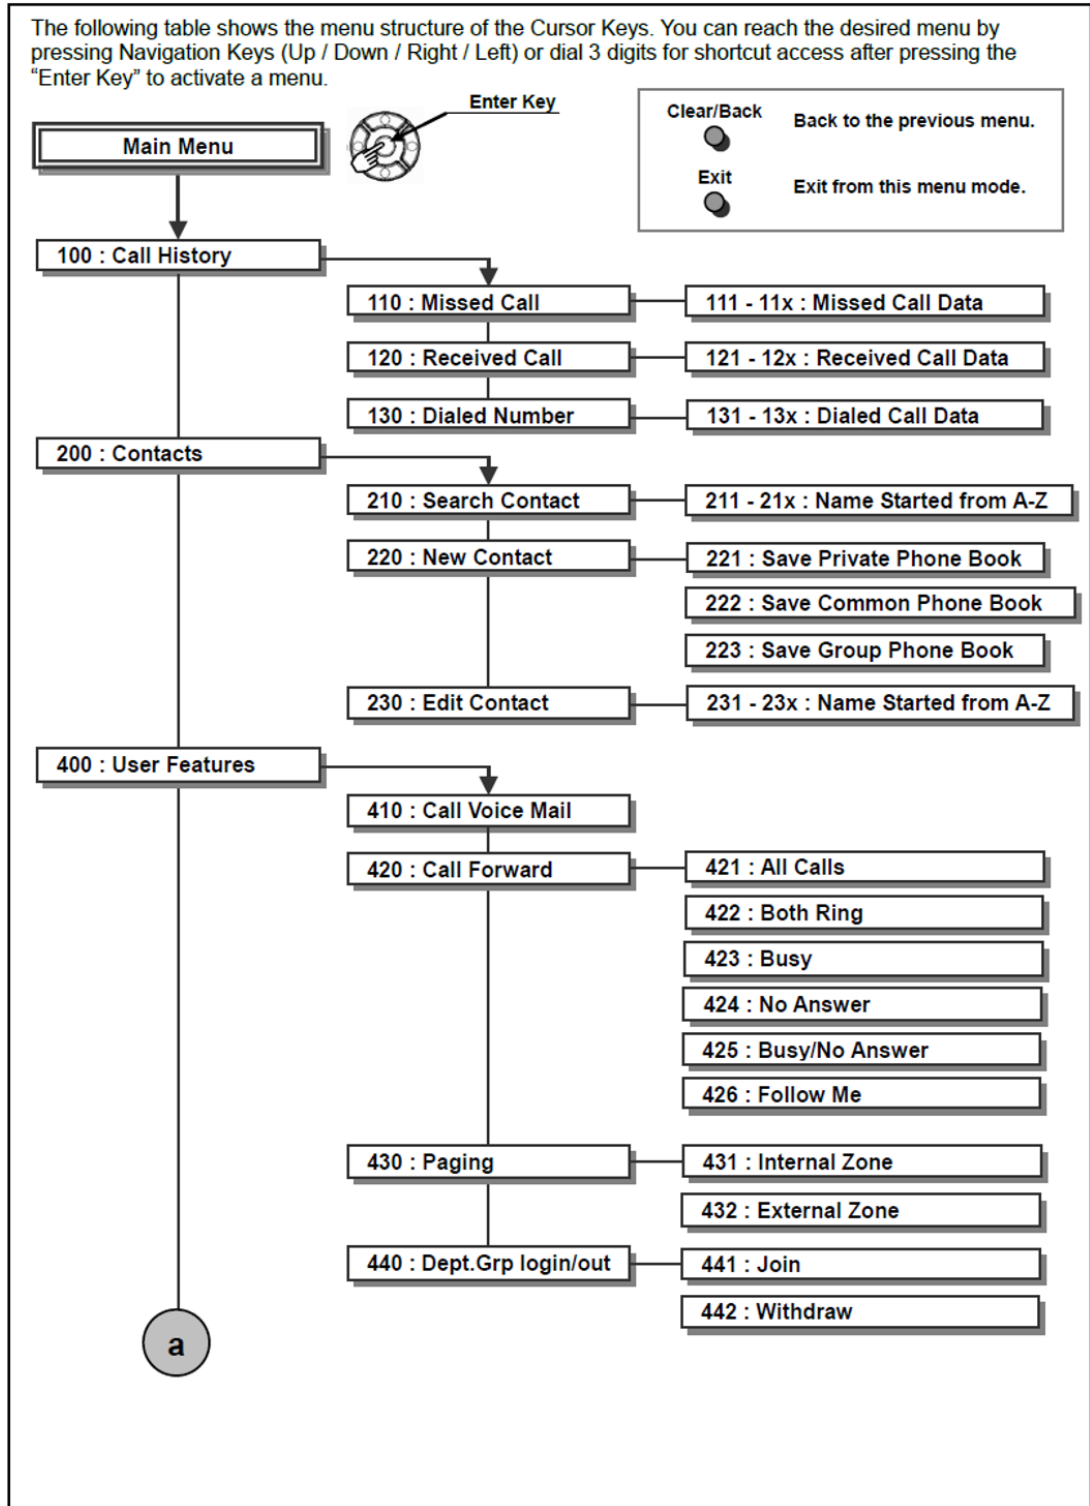


Figure 50 Program 15-02-60 Set to Advanced Mode 1 (Cont.)

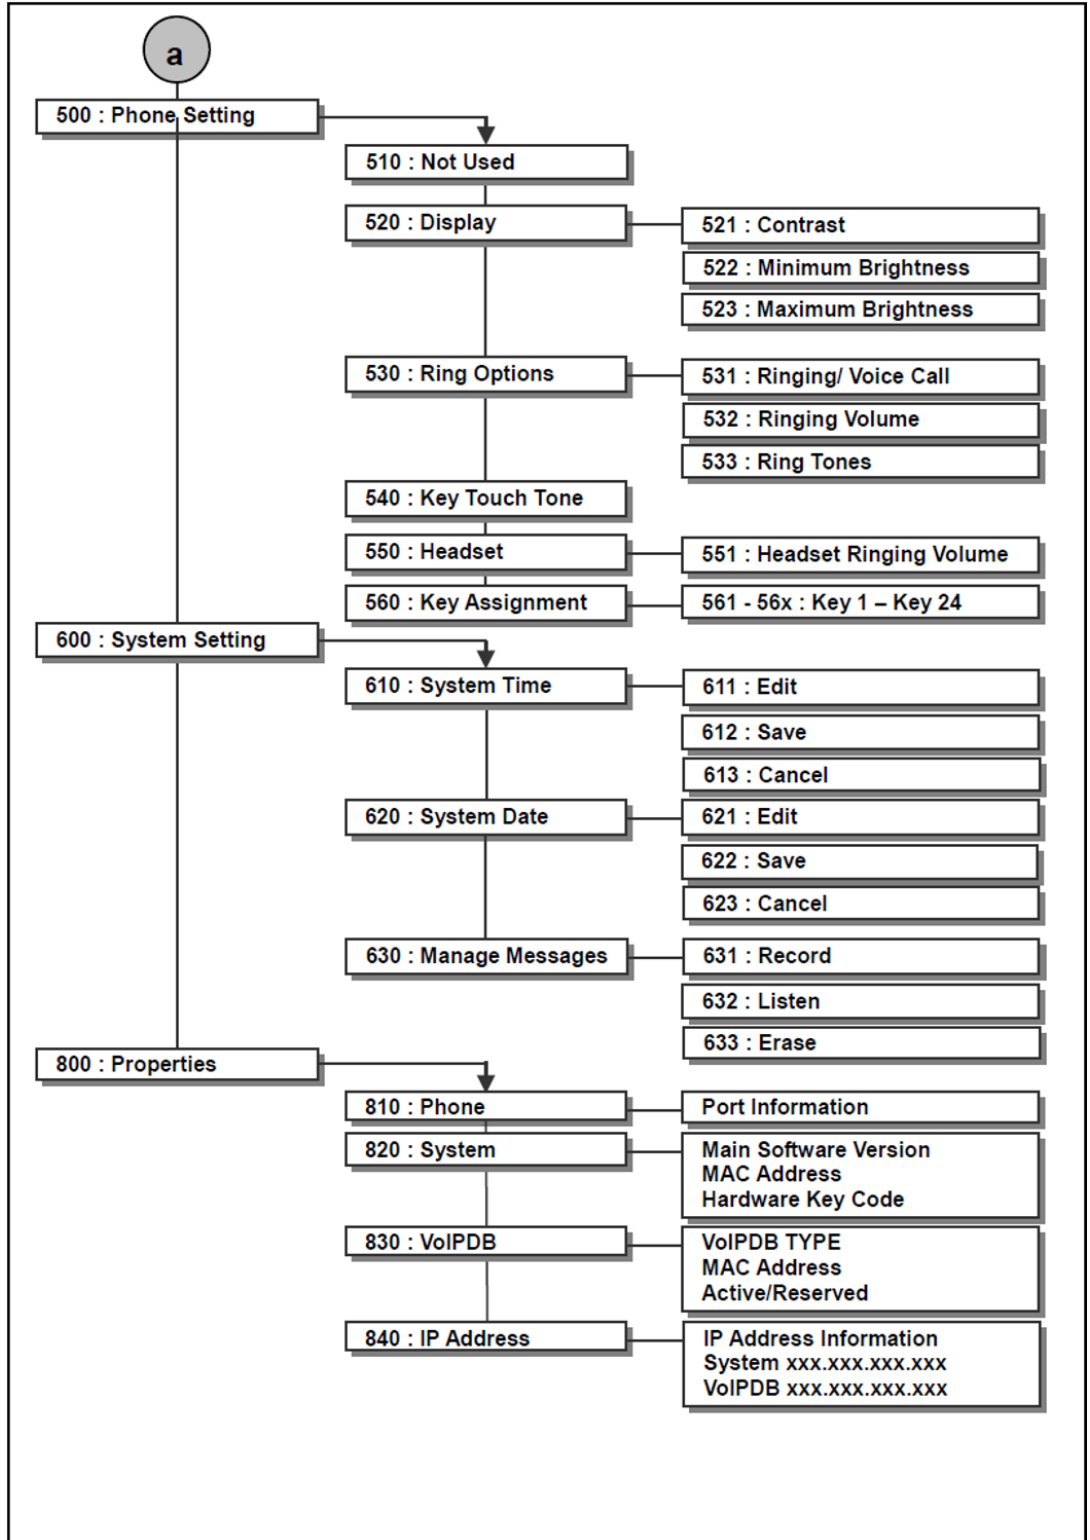

SECTION 7 SOFT KEYS OPERATION – STANDARD MODE

7.1 Soft Key Structure When PRG 15-02-60 is set to Standard Mode

Figure 51 Program 15-02-60 Set to Standard Mode

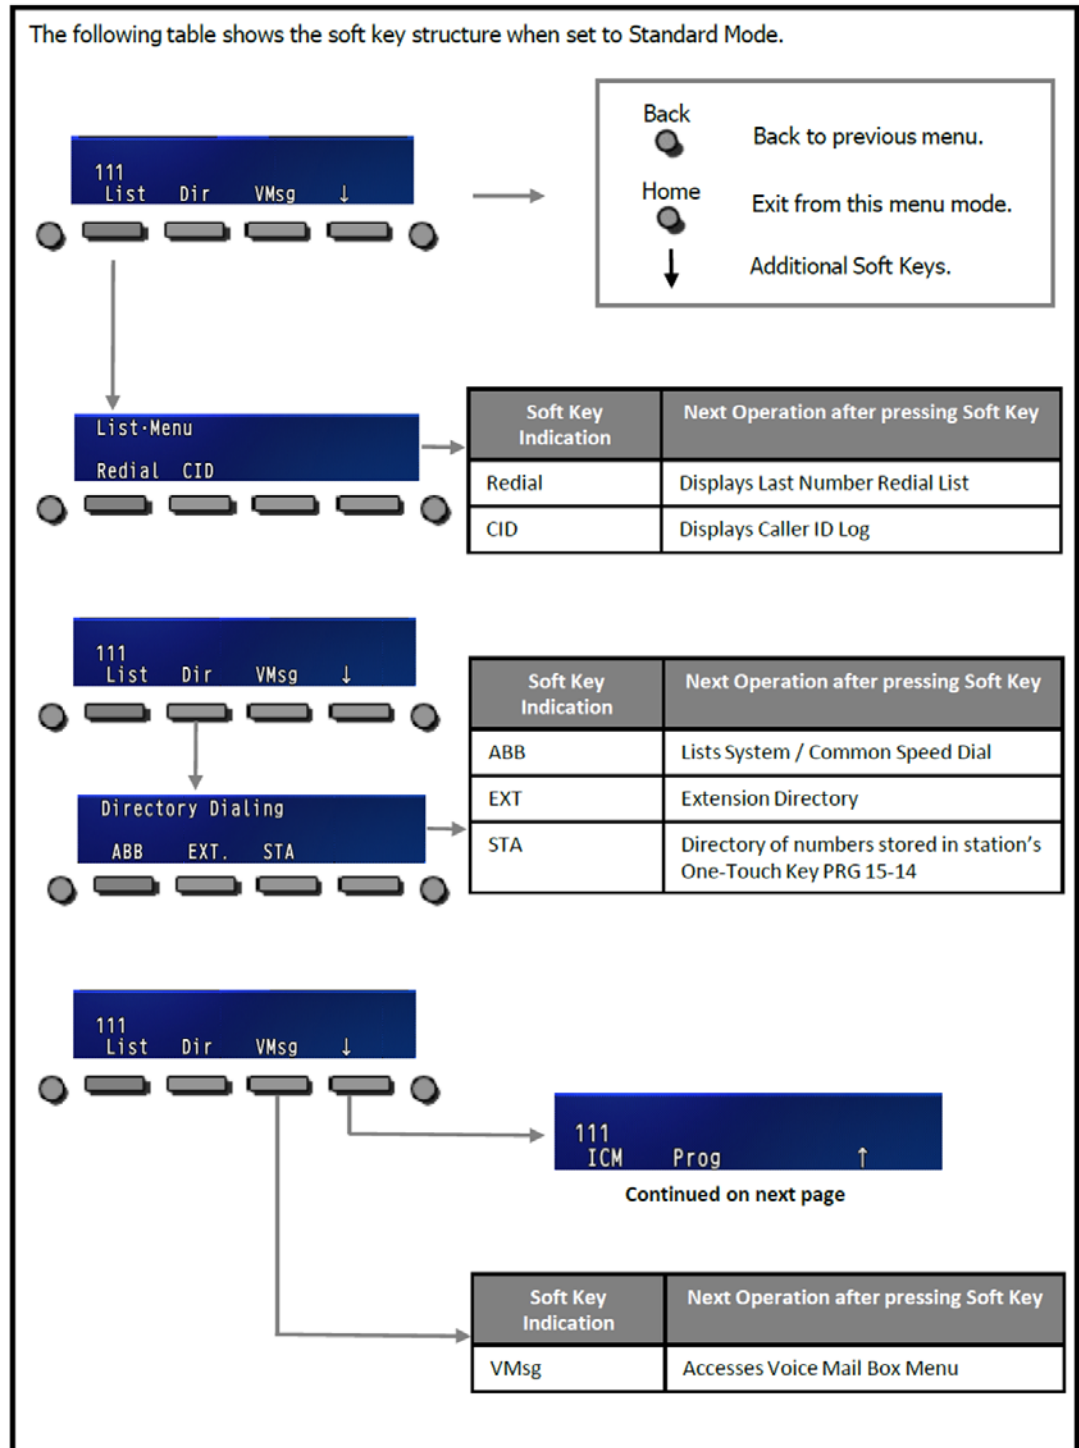


Figure 52 Program 15-02-60 Set to Standard Mode (Cont.)

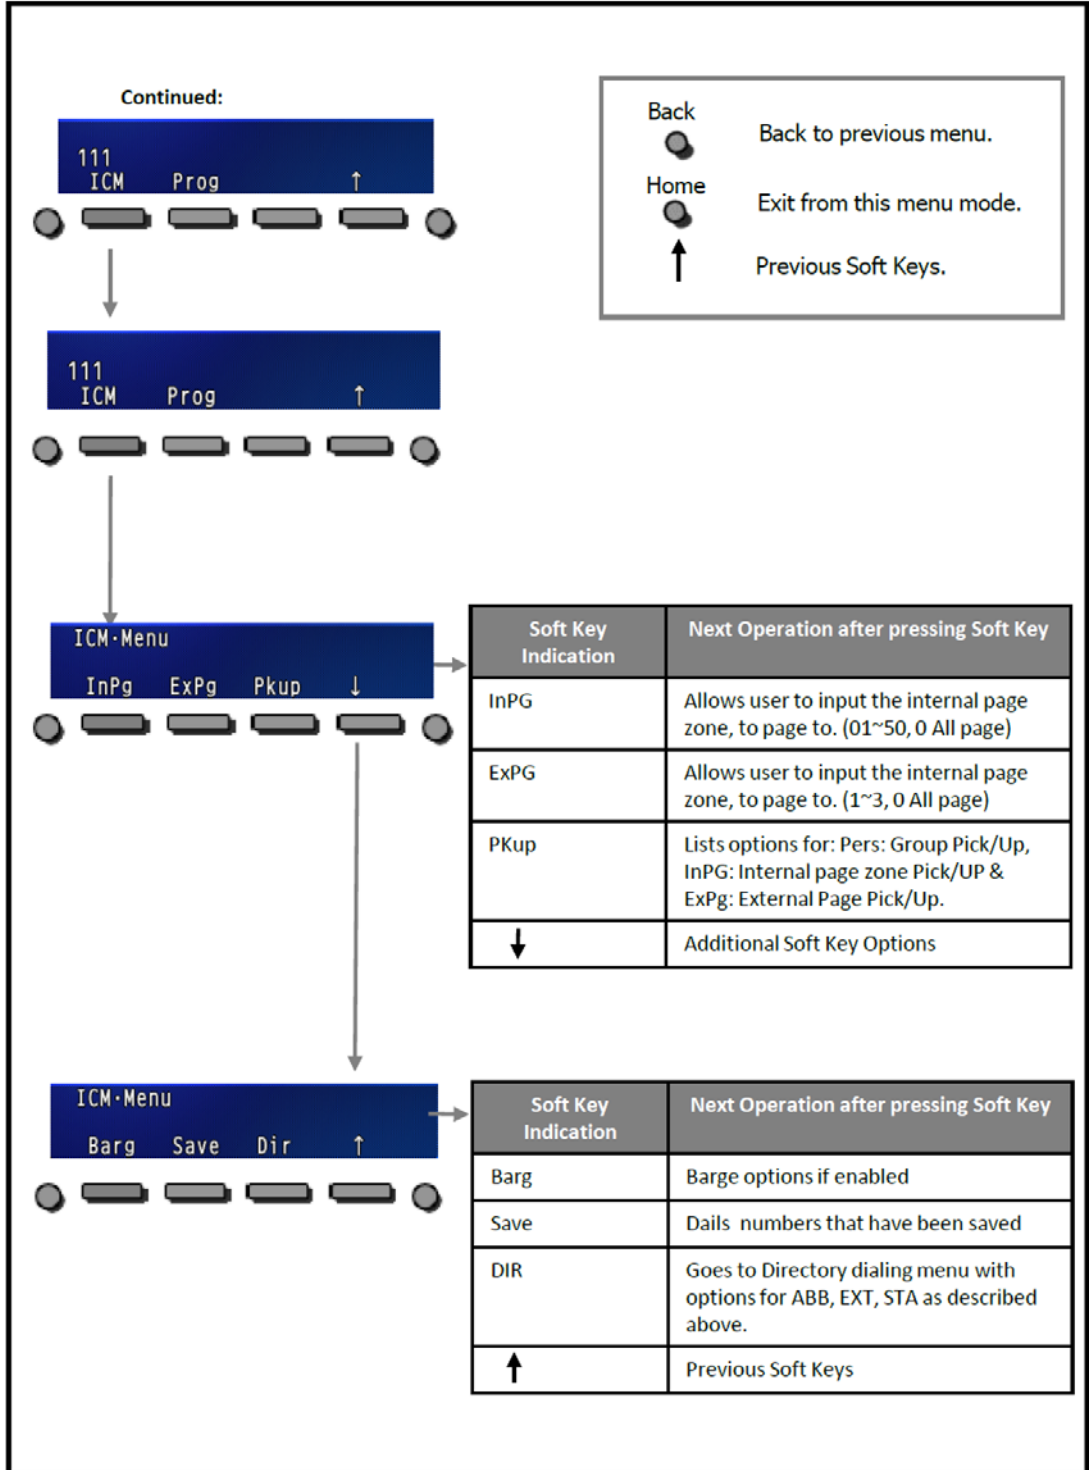


Figure 53 Program 15-02-60 Set to Standard Mode (Cont.)


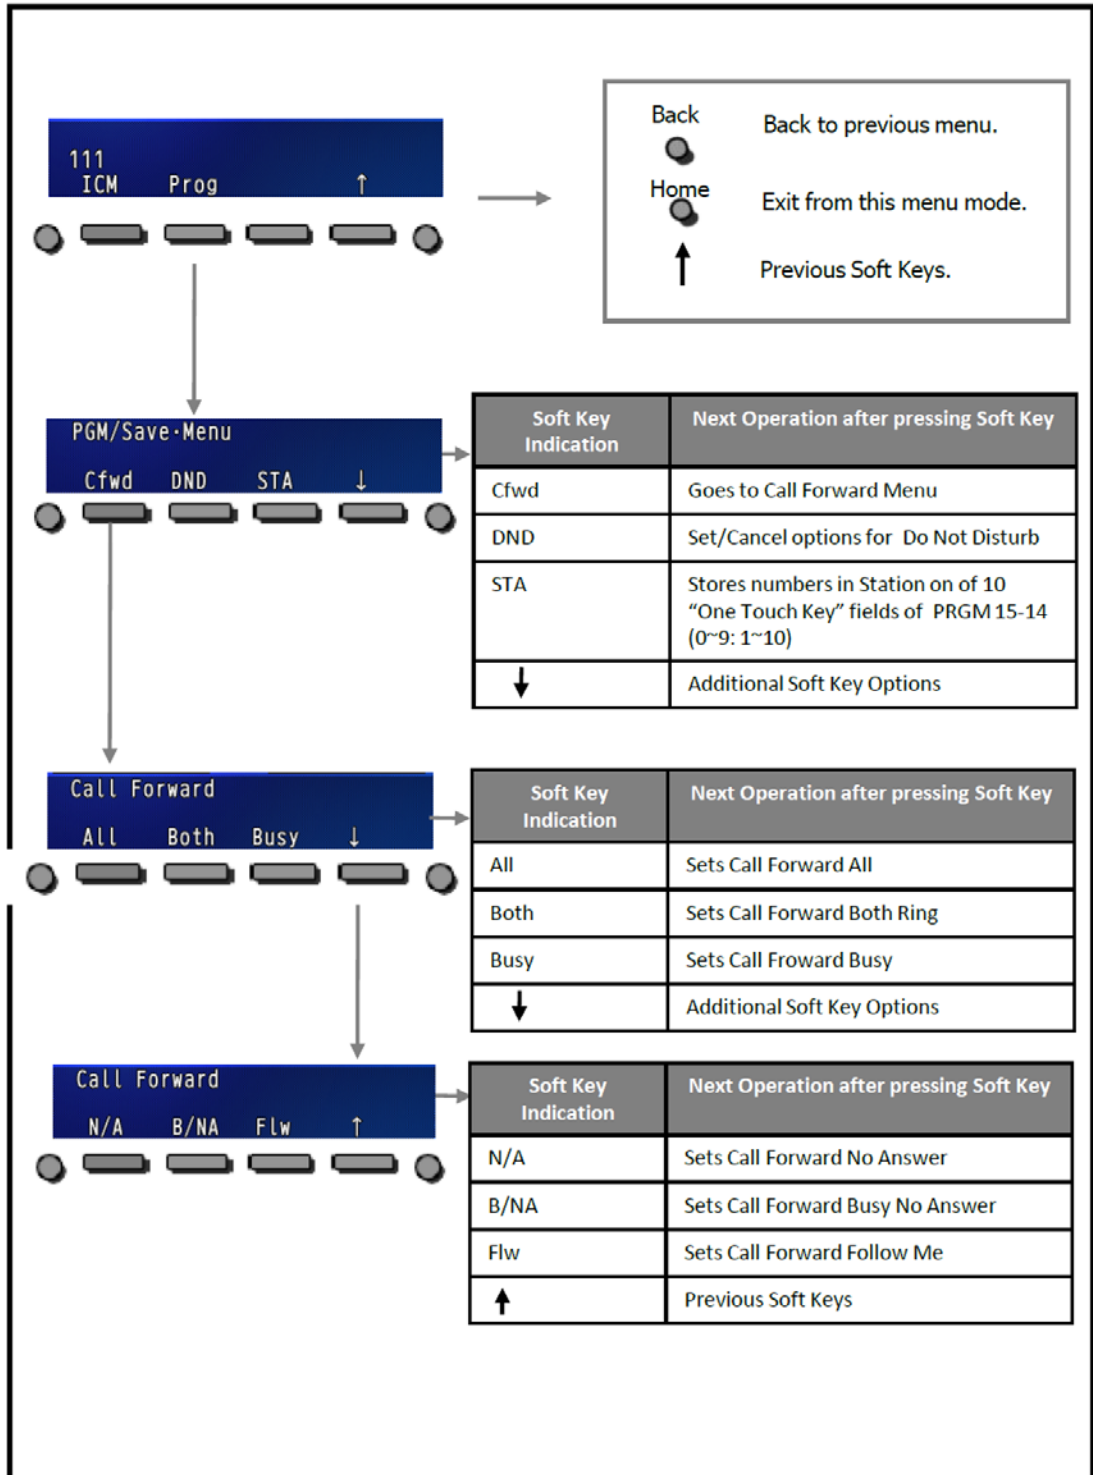



Figure 54 Program 15-02-60 Set to Standard Mode (Cont.)

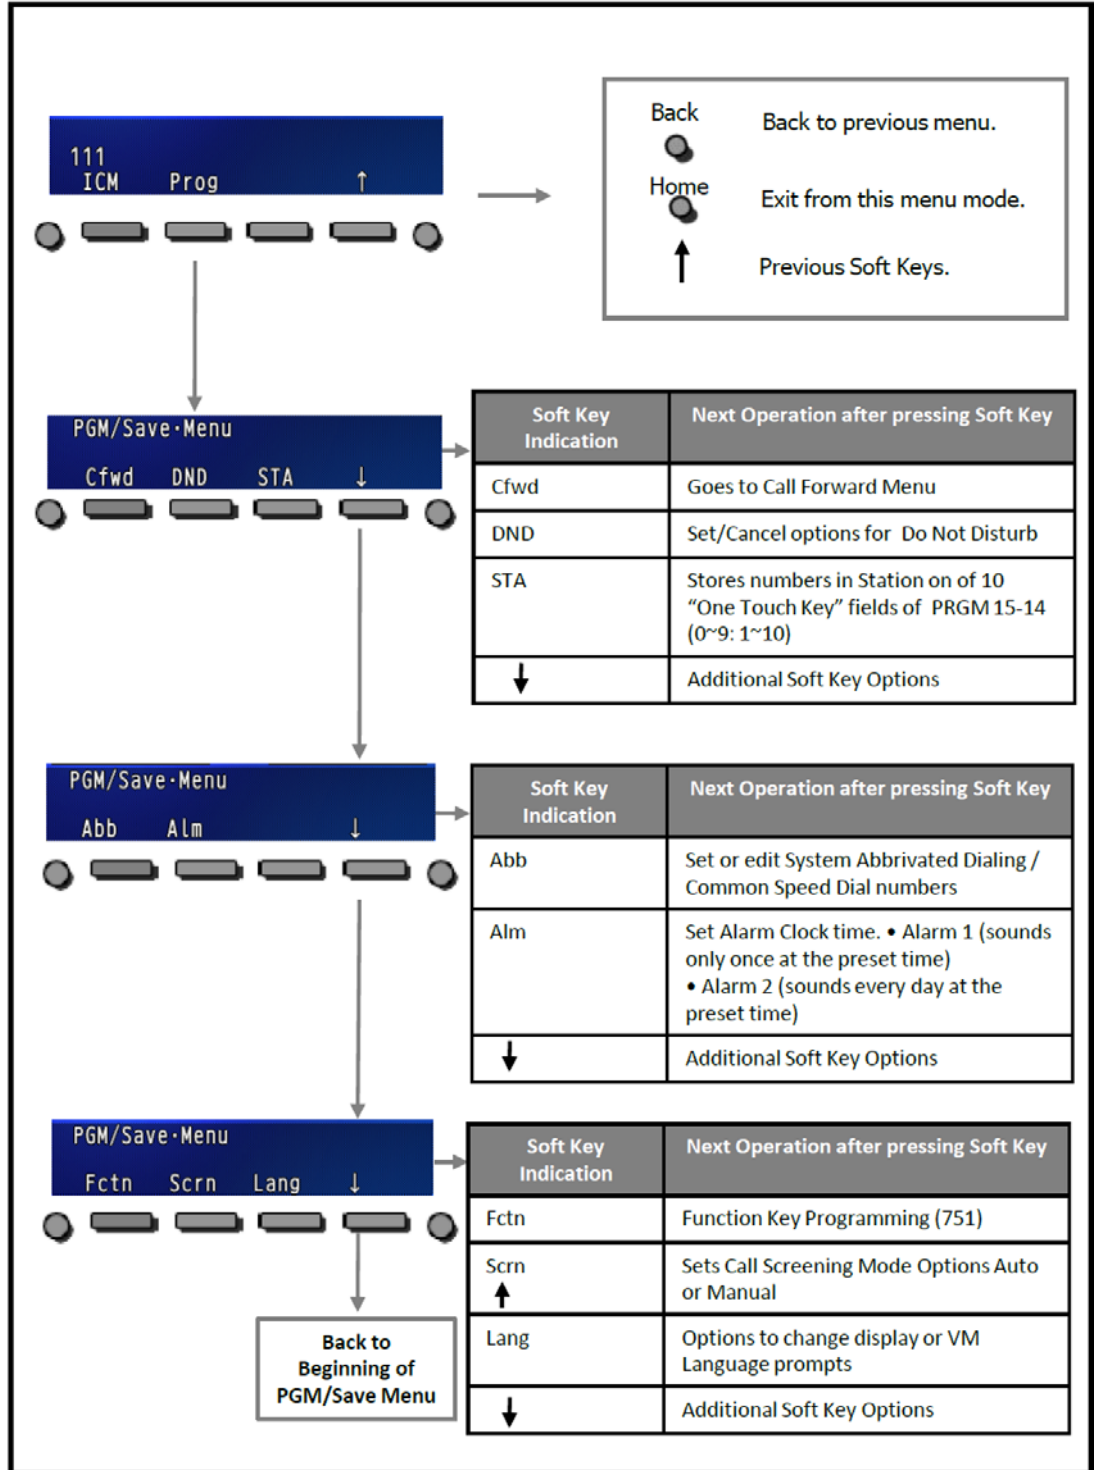

SECTION 8 IN-MAIL (VOICE MAIL)

8.1 Log-On to the In-Mail

Figure 55 Log-On to In-Mail

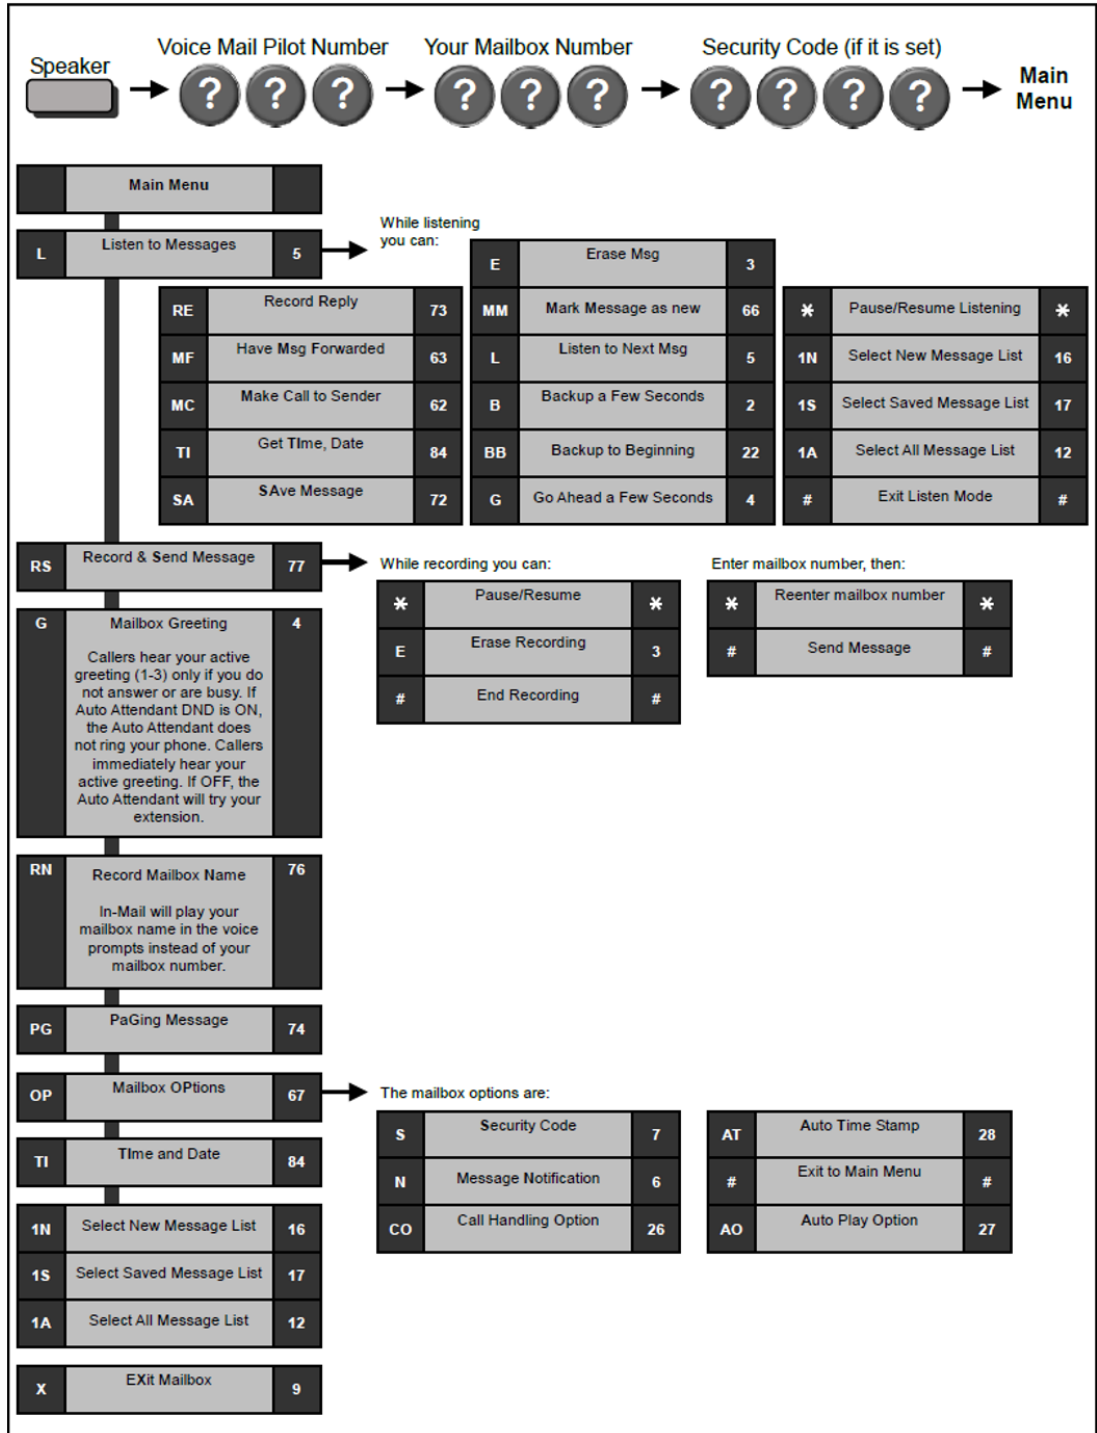

8.2 Call Forward to Voice Mail

Figure 56 Operation by Function Key

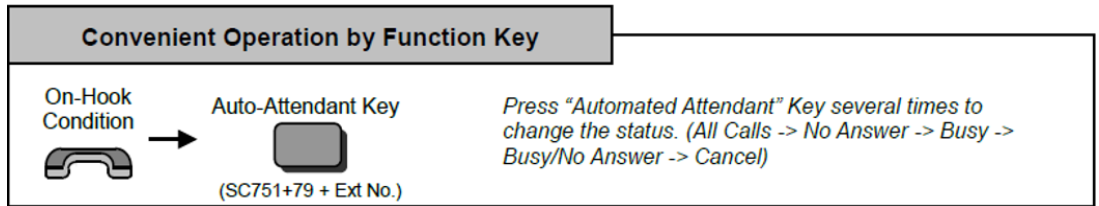


Figure 57 Forward All Incoming Calls

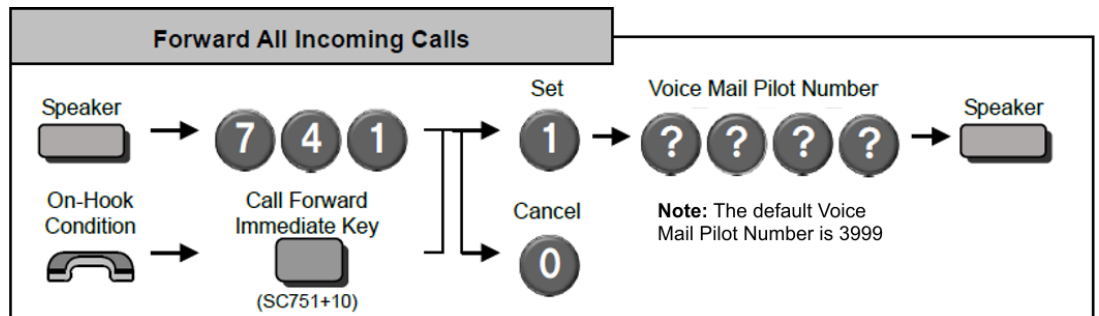


Figure 58 Forward Incoming Call When Busy

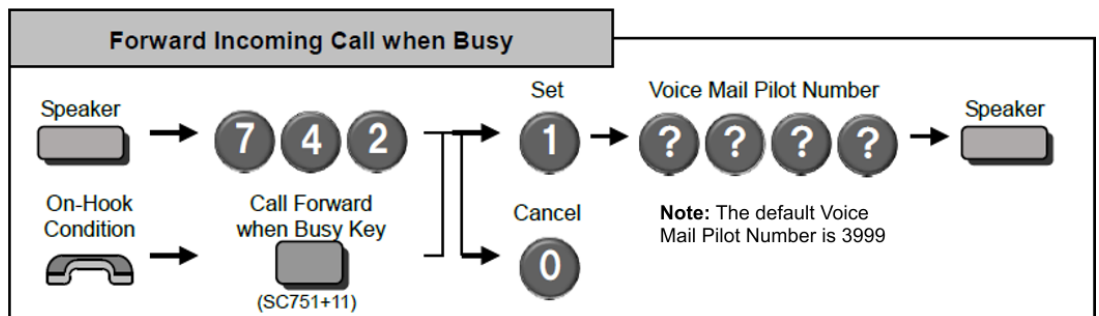


Figure 59 Forward Incoming Call When No Answer



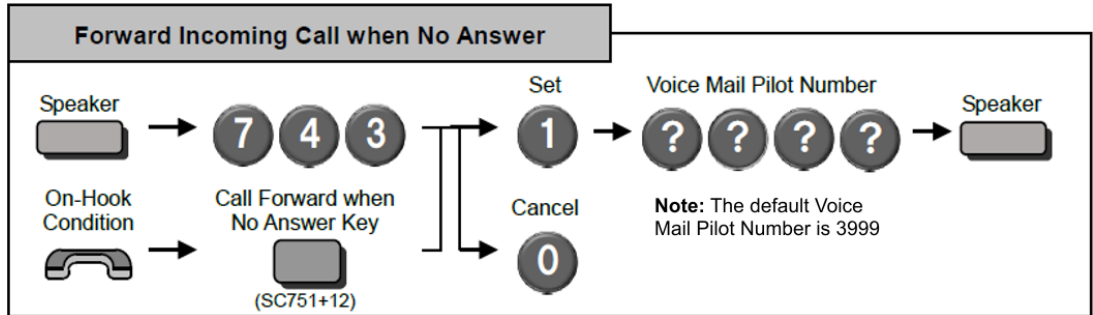


Figure 60 Forward Incoming Call When Busy / No Answer

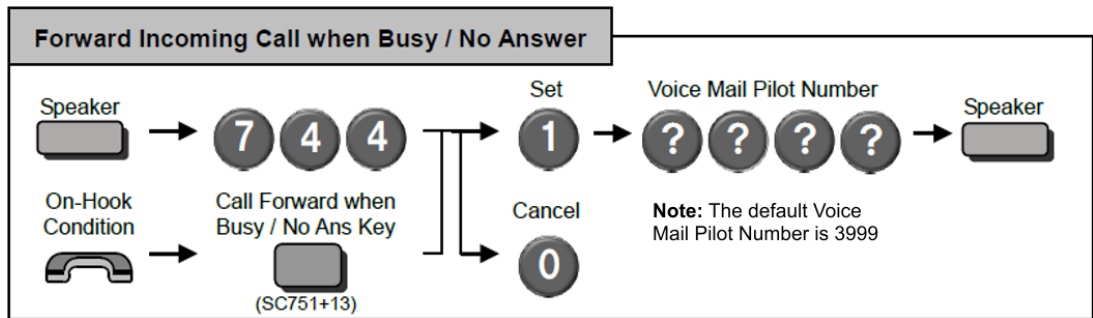

8.3 Mailbox Greeting


Figure 61 Mailbox Greeting

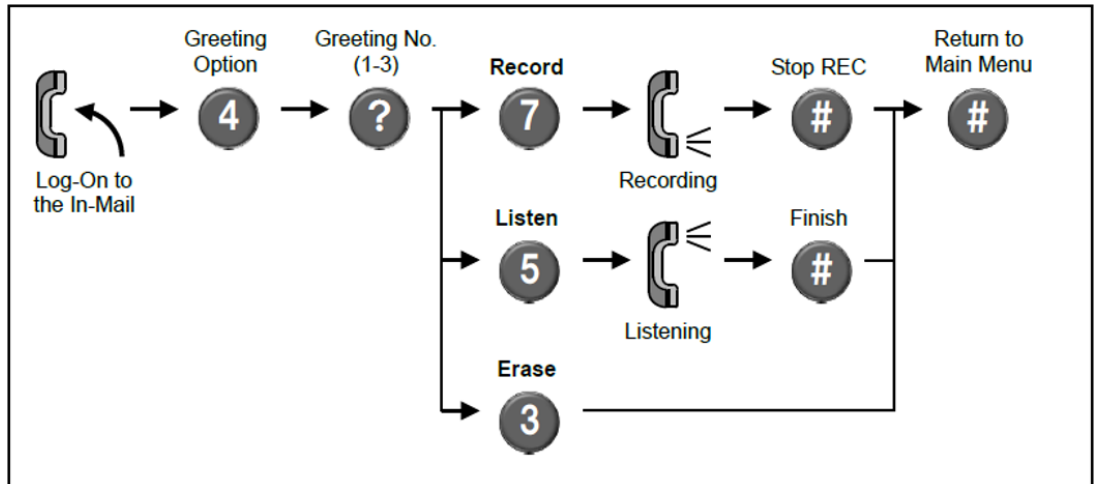

- Selected Greeting (one of three) will be made active.

8.4 Mailbox Security Code

Figure 62 Mailbox Security Code

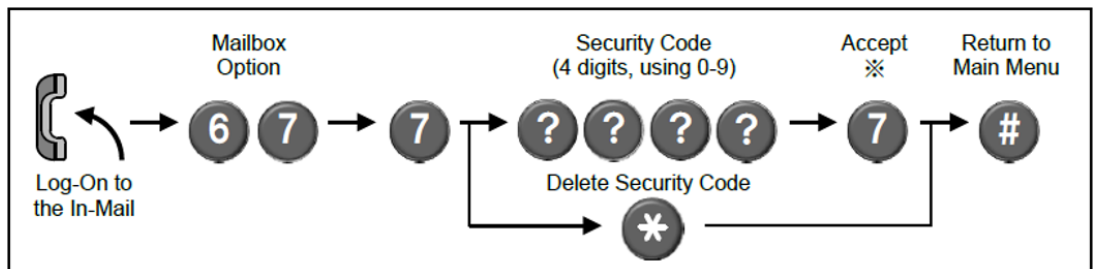

- The type of Security Code can be assigned as below:
 - Dial 4 digits Security Code followed by 7: Security Code for all log-on
 - Dial 4 digits Security Code followed by 6: Security Code for remote log-on only
- System Administrator can delete a Mailbox Security Code.

8.5 Listen to Messages Left in Your Mailbox

Figure 63 Operation by Function Key

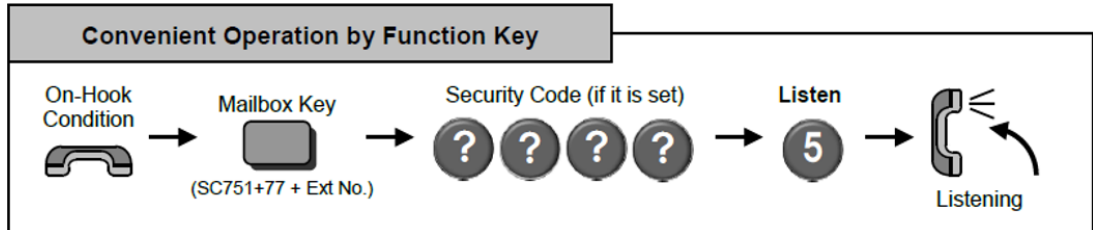


Figure 64 Operation by Soft Key


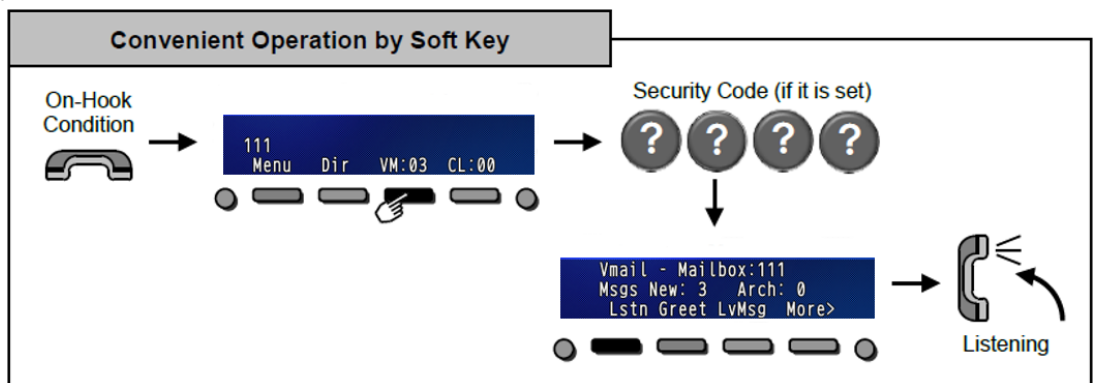


Figure 65 Basic Operation Without Function Key

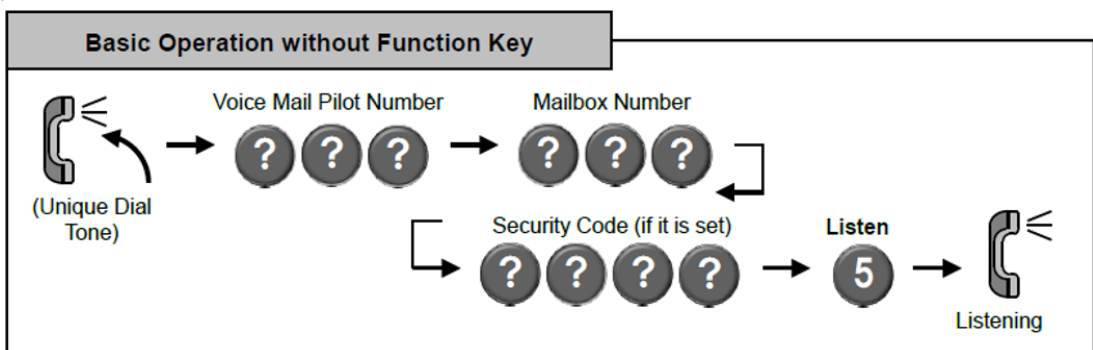


SECTION 9 IN-MAIL (VOICE MAIL SYSTEM ADMINISTRATOR)

The following administrative features are only available at the system administrator's extension (extension 101 at default). Ask your NEC Authorized Supplier for details on how to become a system administrator.

Log-In to In-Mail

Figure 66 Basic Operation Without Function Key

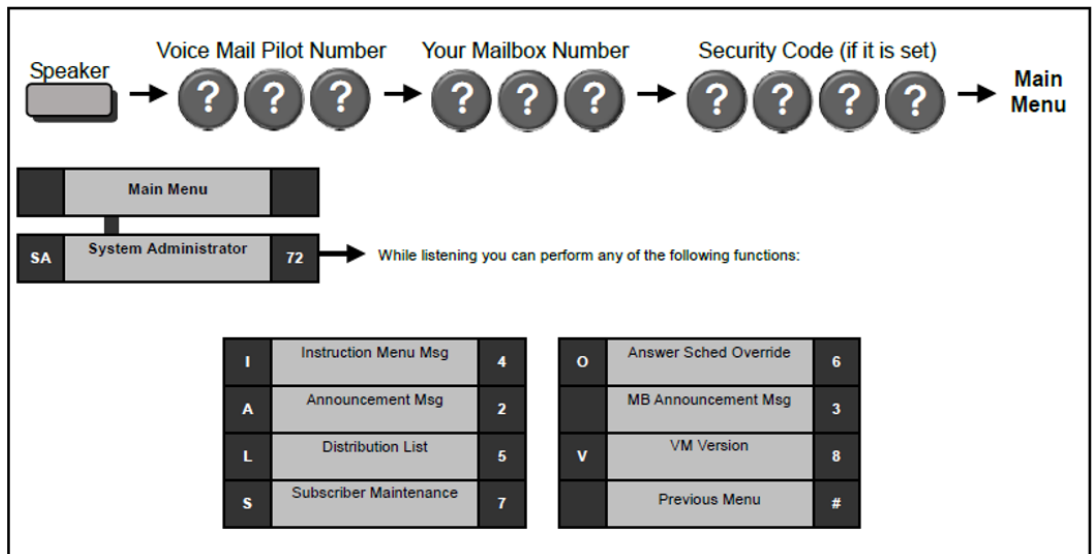

- Instruction Menu Message** are used as the Automated Attendant Main Greetings (e.g. Day Mode greeting, Night Mode greeting, etc)
 - To record an instruction Menu from the System Administrator Menu, dial the digit **4** (Instruction Menu Messages). Dial the mailbox number (**001 – 032**).
 - Press the digit **5** to **Listen** to the message.
 - Press the digit **7** to **Record** the message.
 - Press the digit **3** to **Delete** the message.
 - Press **#** to return to the **System Administrator Menu**.
- Announcement Message** are used to announce general information to callers such as directions, hours of operation, etc.
 - To record an Announcement Message from the System Administrator Menu, dial the digit **2** (Announcement Messages). Dial the mailbox number (**001 – 032**).
 - Press the digit **5** to **Listen** to the message.
 - Press the digit **7** to **Record** the message.
 - Press the digit **3** to **Delete** the message.
 - Press **#** to return to the **System Administrator Menu**.

- Distribution List** is a list of extensions set to receive a single voice mail message. Any message left in the distribution mailbox will be sent to all extensions in the list.
 - To review or modify the Distribution List from the System Administrator Menu, dial the digit **5** (Distribution List). Dial the mailbox number (**001 – 032**) to be modified.
 - Press the digit **6** to **Review** or **Modify** the list.
 - Press the digit **2** to **Add** an extension to the distribution list.
 - Press the digit **3** to **Delete** the current extension from the list.
 - Press the digit **6** to step to the **Next** entry.
 - Press **#** to return to the **System Administrator Menu**.
 - Press the digit **76** to record a **Name** for the distribution list.
 - Press the digit **5** to **Listen** to the name.
 - Press the digit **7** to **Record** a new name.
 - Press the digit **3** to **Delete** the name.
 - Press **#** to **exit this feature**.
 - Press **#** to return to the **System Administrator Menu**.

- Subscriber Maintenance** is used to modify the subscriber mailboxes.
 - To modify a Subscriber Mailbox from the System Administrator Menu, dial the digit **7** (Subscriber Maintenance). Dial the **extension number** of the mailbox you wish to modify.
 - Press the digit **32** to **Delete** all messages.
 - Press the digit **34** to **Delete** the mailbox greeting.
 - Press the digit **36** to **Delete** to the mailbox name.
 - Press the digit **7** to **Delete** the security code.
 - Press the digit **6** to **Record** a new name.
 - Press **#** to return to the **System Administrator Menu**.

- Answer Schedule Override** provides alternate answering for the Automated Attendant by sending calls to a specified Override mailbox, when enabled. As an example you can use the Answering Schedule Override to provide Holiday and Bad Weather closing announcements.
 - To modify the Answer Schedule Override from the System Administrator Menu dial **6** (Answer Schedule override). Dial the answer table number (**01-16**) you wish to override.
 - Press the digit **6** to toggle **On/Off** the answer schedule table.
 - Press the digit **2** to enter a **New** answer schedule override mailbox. Enter the override mailbox number (**001-032 or a valid subscriber extension**). The override mailbox can be an announcement, call routing box, or a subscriber box.
 - Press **#** to return to the **System Administrator Menu**.

- Mailbox Announcement Message** is a message recorded by the system administrator that plays to each subscriber when they log into their mailbox. This message will play each time the subscriber logs into their box until it expires, is deleted, or is made inactive by the system administrator.
 - To record and modify the Mailbox Announcement Message from the System Administrator Menu, dial the digit **3** (Mailbox Announcement Message).
 - Press the digit **5** to **Listen** to the mailbox announcement message.
 - Press the digit **7** to **Record** a new mailbox announcement message.
 - Press the digit **3** to **Delete** the mailbox announcement message.

- Press the digit **2** to **Specify** the amount of days the message is active. Enter * for an indefinite amount of days or enter **01-99** for 1-99 days.
- Press **#** to return to the **System Administrator Menu**.
- Voice Mail Version** will play a message indicating the software level of the voice mail.
 - To hear the current Voice Mail Version from the System Administrator Menu, dial the digit **8** (Voice mail Version).



SL2100

DT920 (ITK-8LCX) User Guide

NEC Enterprise Communication Technologies, Inc.

ISSUE 1.0